

TroublePix User Guide

Contents

1 Getting Started	5
1.1 About TroublePix	5
1.2 Operating System Requirements	5
1.3 Installing TroublePix	6
1.4 Updating TroublePix	6
1.5 Licensing TroublePix	7
1.5.1 Licensing with a Machine Code	8
1.5.2 Licensing with an USB Key	8
2 Graphical User Interface	9
2.1 Overview	9
2.2 Main Menu	10
2.3 Status Bars	10
2.4 Display Area	12
2.5 Right View	12
2.6 Bottom View	13
2.7 Language Localization	13
3 Operating TroublePix	14
3.1 Loading a Grabber	14
3.2 Adjusting Grabber Properties	15
3.2.1 Camera Settings	15
3.2.2 Adjustments	16
3.2.3 Serial Communication	17
3.3 Recording	18
3.4 Setting Up a Recording	19
3.5 Pre/Post Triggering	20
3.6 Marking Frames	21
3.6.1 Marker List	21
3.6.2 Valid vs. Invalid Markers	22
3.6.3 Adding or Removing Markers	22
3.6.4 Browsing Markers	23
3.6.5 Editing Markers	23
3.6.6 Exporting Markers	24
3.6.7 Printing Markers	24
3.6.8 How Markers Are Stored?	24
3.7 Input Control	25
3.8 Output Control	27
3.9 Review vs. Playback	28

- 3.10 Reviewing while Recording 29
- 3.11 Playback 30
 - 3.11.1 Loading a recorded video 30
 - 3.11.2 History Panel 30
 - 3.11.3 Defining a Selection Range 31
 - 3.11.4 The Playback Bar 32
 - 3.11.5 Controlling the Playback Speed 33
 - 3.11.6 Thumbnail View 34
- 3.12 Bayer Conversion 35
 - 3.12.1 About Bayer Conversion 35
 - 3.12.2 Bayer Conversion in TroublePix 36
- 3.13 Adjusting the Zoom 37
- 3.14 Displaying in Full Screen Mode 37
- 3.15 Printing a Captured Image 38
- 3.16 Exporting a Captured Image 40
- 3.17 Saving or Exporting a Sequence 41
 - 3.17.1 Saving a Sequence 41
 - 3.17.2 Exporting a Sequence to a Windows Movie File 43
 - 3.17.3 Exporting a Sequence to a QuickTime Movie File 44
- 4 Status Information 45
- 5 TroublePix Settings 46
 - 5.1 Startup Settings 46
 - 5.2 Display Settings 47
 - 5.3 Time Stamp Settings 48
 - 5.4 Time Source Settings 50
 - 5.5 Auto Naming Settings 51
 - 5.6 Recording Settings 52
 - 5.7 Playback Settings 53
 - 5.8 Export Settings 54
 - 5.9 AVI Settings 55
 - 5.10 MOV Settings 55
 - 5.11 Compression Settings 56
 - 5.11.1 Lossy vs. Lossless Compression 56
 - 5.11.2 Compression Performance 57
 - 5.12 Advanced Settings 59
- 6 Keyboard Shortcuts 60
- 7 Plugin Modules 61
 - 7.1 Audio Trigger 61
 - 7.2 Brightness, Contrast, Gamma 62
 - 7.3 Color Remapping 63
 - 7.3.1 Color Remapping Using Predefined Look Up Tables 64
 - 7.3.2 Color Remapping Using a LUT File 64
 - 7.3.3 Color Remapping Using Linear Window Leveling 65
 - 7.3.4 Color Remapping Using Non-linear ASC CDL Formula 65

- 7.4 Motion Detector 66
 - 7.4.1 Motion Detection Algorithms 66
 - 7.4.2 Mean Gray Algorithm 67
 - 7.4.3 Absolute Difference Algorithm 67
 - 7.4.4 Configuring Motion Detector 68
 - 7.4.5 Configuring the Action 68
 - 7.4.6 Configuring the Motion Detection Algorithm 69
 - 7.4.7 Configuring the Mean Gray Algorithm 69
 - 7.4.8 Configuring the Absolute Difference Algorithm 69
 - 7.4.9 Configuring a Region of Interest (ROI) 70
 - 7.4.10 Testing the current configuration 71
- 7.5 Line Overlay 71
- 7.6 MCC Pulse Generator 72
- 7.7 NI Pulse Generator (Traditional NI-DAQ) 72
- 7.8 Camera-specific Plugins 73
 - 7.8.1 IDT M3 Camera Control 73
 - 7.8.2 ImperX Camera Control 74
 - 7.8.3 Mikrotron Camera Control 74
 - 7.8.4 Optronis Camera Control 75
 - 7.8.5 Photon Focus Camera Control 76
- 8 TroublePix Tools 77
 - 8.1 Batch Processor 77
 - 8.2 Sequence Header Editor 78
 - 8.3 Register Manager 79
 - 8.4 NorPix Logger 80
 - 8.5 Disk/Memory Benchmark 81

1 Getting Started

1.1 About TroublePix

TroublePix is a professional software solution for using high speed digital video recording to monitor and troubleshoot rapidly evolving processes. A typical application is to monitor production line jams in packaging operations. This requires live image display from a camera, continuous recording and simultaneous playback operations. TroublePix supports a wide variety of high-resolution and high-speed digital cameras.

TroublePix lets you continuously record digital video data to a computer memory or hard disk, so that when a problem occurs you can detect it, diagnose it and ultimately prevent it from happening in future. Simply launch TroublePix, point the camera to the area to troubleshoot, set up the software for loop recording and start recording. Captured images will be continuously stored, either to RAM or hard disk. When a trouble event occurs, review the captured images to identify the problem. Furthermore, captured images can be exported individually or as video file to widely known formats, allowing you to share the content with other PC / Mac / Linux users.

TroublePix provides simultaneous triplex functionality: record, review and playback.

1.2 Operating System Requirements

- Windows XP® Professional or Home Edition with Service Pack 2 or later;
- Windows Vista® Home Basic, Home Premium, Business, Ultimate or Enterprise;
- Microsoft Windows® 7 Home Premium, Professional, Ultimate or Enterprise;
- Windows Server® 2003, 2008 or 2008 R2;

For any of the operating system above both 32bit and 64 bit platforms are supported.

1.3 Installing TroublePix

To install TroublePix, run **TroublePix-setup.exe** (**TroublePix.Win64-setup.exe** for Windows 64-bit versions) and follow the on-screen instructions.

Depending on the camera/frame grabber you're planning to use, it may be necessary to install a third-party device driver. Refer to your camera/frame grabber manual for instructions on how to install the driver.

You must successfully install camera driver before installing TroublePix.

1.4 Updating TroublePix

To benefit of new features or software improvements, it is recommended to check for updates regularly and always have the latest version of the software. To check for updates, go to the **Help** menu and select **Check for Updates** (Ctrl+U).

Normally, when you update TroublePix, there is no need to uninstall the previous version. Therefore, no backup of the configuration file¹ is required.

However, on rare occasions, when the differences between the two versions are so significant that make them incompatible, an uninstallation may be required. In such rare case, a backup of the configuration file is recommended.

Before updating the software, please visit NorPix website and check the [driver compatibility list](#).


¹ Most TroublePix settings are stored to a configuration file, **TroublePix.ini**. For Windows XP users the configuration file is located in **C:\Documents and Settings\<username>\Application Data\Norpix\TroublePix** folder. For Windows Vista and Windows 7 users, the default location is **C:\Users\<username>\AppData\Roaming\Norpix\TroublePix**. For quick access to the configuration file, go to the **Tools** menu and select **Configuration File** (Ctrl+F9).

1.5 Licensing TroublePix

To run your camera/frame grabber within TroublePix, you must have a valid license code. When purchasing the software directly from NorPix, a CD is provided containing the installation kit, the license file and the documentation. In case you downloaded the software, the license file can be requested either by email at sales@norpix.com or by phone at +1 (514) 846-0009. When doing so, it is important to mention the camera and/or frame grabber you're planning to use. You will receive an email with a file attachment containing a TroublePix license.

A TroublePix license must be associated with a physical device, that could be either a computer, using its unique **machine code**, or a **USB key**. In practical terms, a license based on a machine code is tied to the computer on which your copy of TroublePix is installed. A license based on a USB key can be moved around from computer to computer as long as the license file and the USB key match.

When you install TroublePix, a small utility called **SysInfo** is included in TroublePix installation folder. Run this utility before contacting NorPix to request a license. To access this application directly from TroublePix, select **License Information...** (Ctrl+Shift+L) from the **Help** menu. **SysInfo** will launch and display the machine code required to activate your license, as shown below.

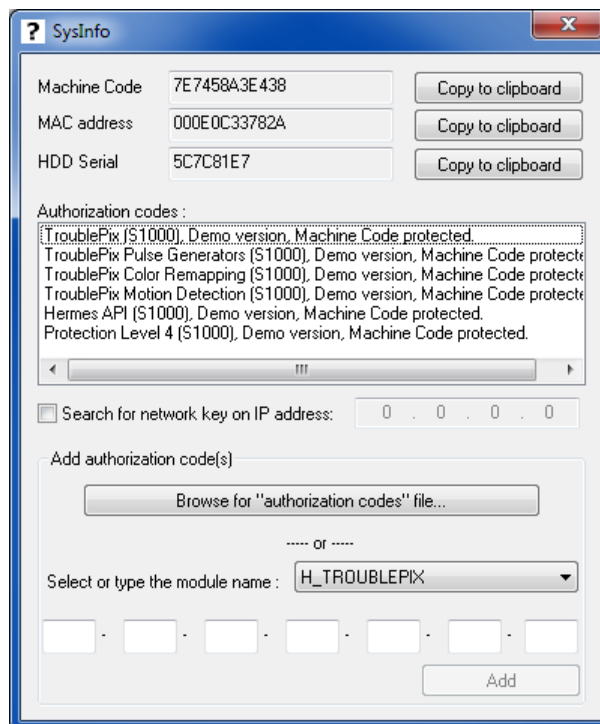

1.5.1 Licensing with a Machine Code

Start by running the **SysInfo** program located in TroublePix folder, which will show you the **machine code**. Contact **NorPix** either by phone at +1 (514) 846-0009 or email at sales@norpix.com and ask for a license. We need to know your computer's machine code and the grabber you're planning to use.

If you choose to write us an email, in short time after you submit the information above you will receive an email containing your license code and information on how to register it. Attached to email you'll find a license (**.npx**) file, containing the authorization codes. Save this file to a desired location and follow the emailed instructions to register it.

It is strongly recommended to keep a copy of the license (.npx) file safe.

1.5.2 Licensing with an USB Key

A license based on a USB key allows you to run TroublePix on different computers. The USB key must remain plugged in to one of the computer's USB ports while TroublePix is running. To use this method, start by installing the **Sentinel** driver. Users who purchased TroublePix directly from NorPix, can install it from the provided TroublePix CD. Those who downloaded the software can find it here: <http://www.norpix.com/Download/SentinelInstaller.exe>. To instal the Sentinel driver, please follow this procedure: <http://www.norpix.com/support/faq.php#sentinel>.


After the Sentinel driver installation has completed successfully, locate the **.npx** license file and use **SysInfo** application to register it. If you don't have a license file yet, contact NorPix either by phone at +1 (514) 846-0009 or by email at sales@norpix.com to request one. To get a license code we only need to know the camera/frame grabber you're planning to use.

Remember that even if you use your USB-based license to run TroublePix on different computers, only one computer at a time can be running the software for a given license.

2 Graphical User Interface

2.1 Overview

When you launch TroublePix, the user interface will look as shown below:

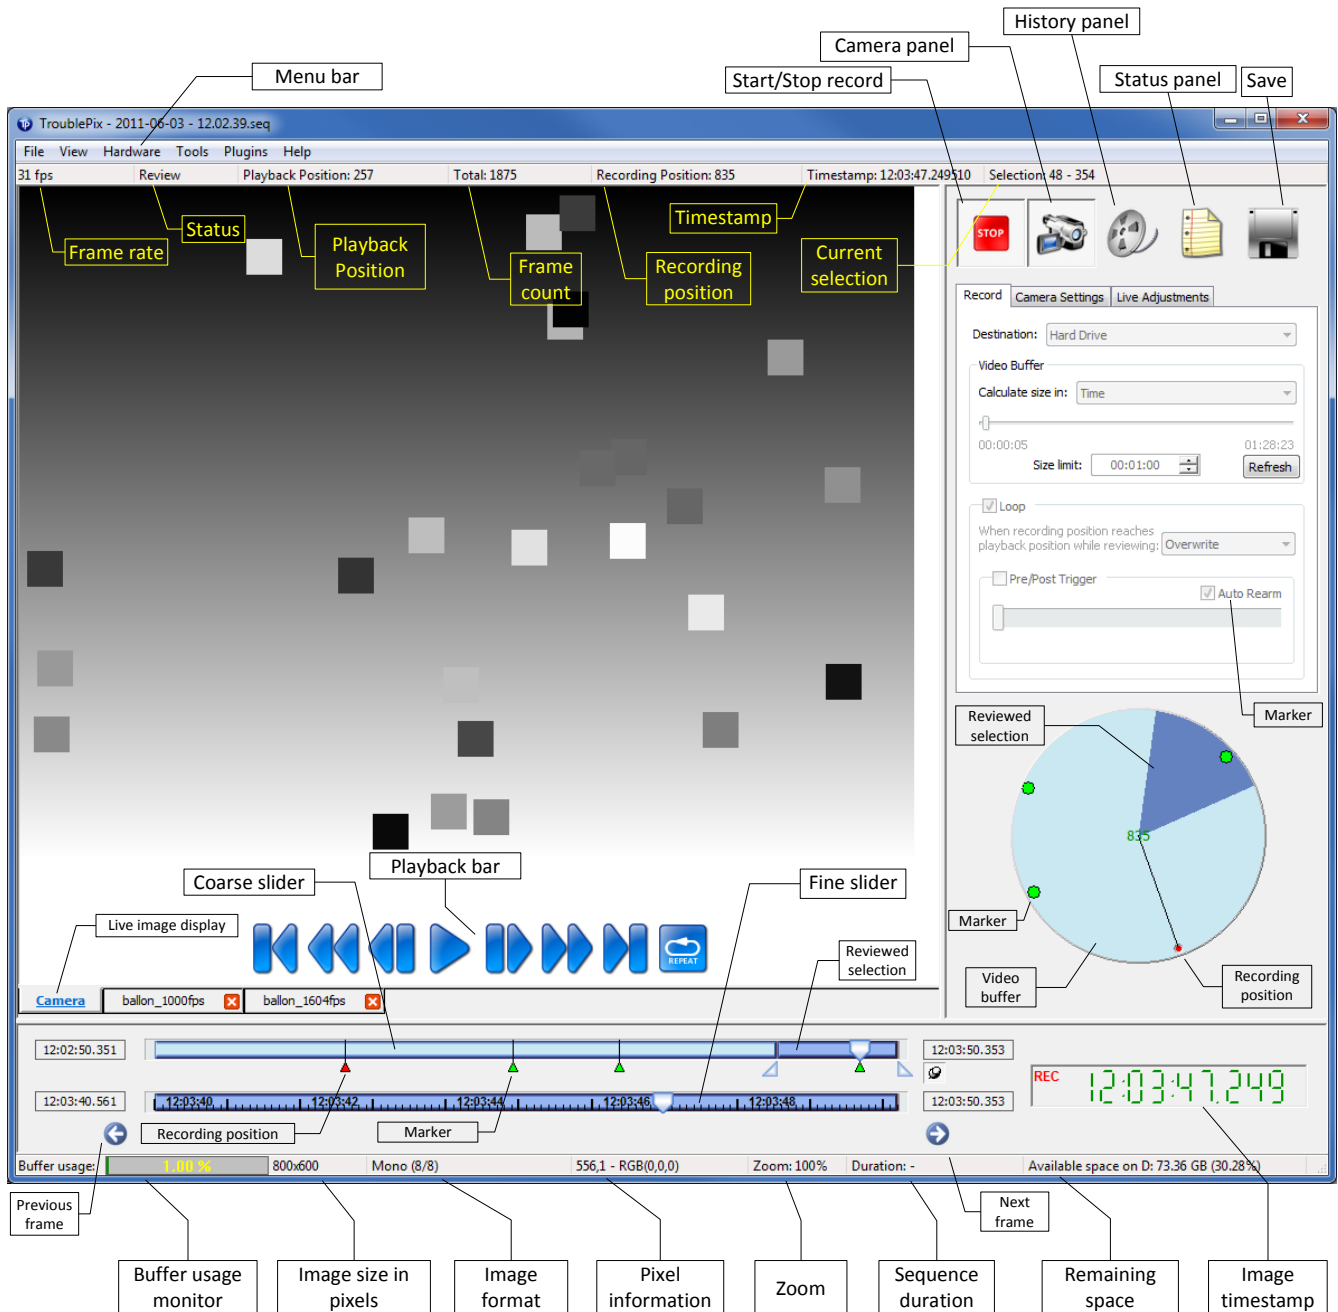

2.2 Main Menu

Typically each menu item has a defined keyboard shortcut. If a keyboard shortcut doesn't respond, click the image display area to restore keyboard focus to the TroublePix main window.

For a complete list of keyboard shortcuts, please refer to the [Keyboard Shortcuts](#) section.


2.3 Status Bars

The top status bar displays a variety of information as described below:

32 fps	LIVE	Playback Position: -	Total: -	Recording Position: -	Timestamp: -	Selection: -
15.301 fps (100%)	Playing	Playback Position: 11	Total: 59	Recording Position: -	Timestamp: 23:04:20.467878	Selection: 1 - 59

- **Frame Rate** reports the number of images per second being received from the camera. If in **Playback** mode, the frame rate indicates the playback speed.
- **Status** indicates the current working mode, which can be one of the following:
 - **LIVE** - TroublePix is receiving and displaying images from the camera;
 - **Recording** - TroublePix is currently recording;
 - **Review** - While still recording, you are reviewing earlier parts of the sequence;
 - **Playback** - You are playing back a recorded sequence;
 - **Standby** - TroublePix is waiting for live images from the camera;
- **Playback Position** indicates the frame index in the current sequence.
- **Total** indicates the total number of frames stored in the current sequence.
- **Recording Position** indicates where the next frame will be stored in the sequence. In case of continuous recording this is at the end of the file, but when loop recording is activated it will be at some location within the file.
- **Timestamp** displays the absolute time stamp when the current frame was captured.
- **Selection** reports the range of frames included in the current selection.

The bottom status bar displays status information such as:

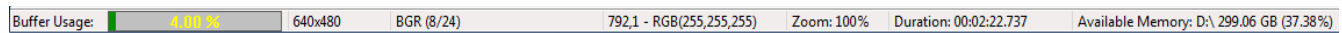

- **Buffer Usage** indicates the percentage of temporary buffers holding images waiting to be processed. When recording is in progress, images received from the camera are stored in temporary memory buffers until they can be processed. If an image is received when no buffer is available, that image is lost. The buffer usage is indicated as a percentage. When low, the bar is green. As the buffer usage gets close to the maximum value, the bar turns red. On a well-configured system this should never occur. To validate your system, do a recording test and monitor the buffer usage. If the percentage reaches 50% or more, increase the number of buffers by 25% and repeat the test. Continue doing so until the indicator stabilizes and remains green. The number of buffers can be set by selecting **Buffer Count** (Ctrl+F) from the **Hardware** menu.
- **Image Size** indicates the width and height in pixels of the captured image.
- **Image Format** indicates the image format (monochrome, color or raw Bayer) and bit depth shown as bit depth per channel / total bit depth.
- **Pixel Information** indicates mouse coordinates relative to the image origin (top-left corner) and pixel color under the mouse pointer.
- **Zoom** indicates the current zoom display ratio.
- **Sequence Duration** indicates the sequence length in time.
- **Available space** indicates the available recording space on disk or RAM.

2.4 Display Area

This area is used to display images either from the camera or previously recorded files. Up to 5 recorded sequences and 1 AVI file can be loaded simultaneously in separate views, along with the **Camera View**. Only one view can be active at a time, since it occupies the entire image display area. To quickly switch between views use Alt+1, Alt+2, etc. keyboard shortcuts. For example, Alt+1 activates Camera View, Alt+2 the first playback view and so on.

Views are listed along the bottom of the image display area and are described below:



- **Camera View:** Unless live capture is disabled, it always displays live feed from the camera in real time, at up to 25 frames per second. It would be pointless to display at higher rates because the human eye can not perceive it due to retina persistence.
- **Playback View:** This window may contain a previously recorded sequence or AVI file. For disk files, the view takes the name of the file being reviewed. For RAM-stored sequences, the name of the view begins with "RAM".

2.5 Right View

This area contains most of the controls for interacting with TroublePix as follows:

The **Record** (F5) button allows to start or stop a recording.

The **Camera Panel** (F6) provides access to the recording parameters and camera features.




The **History Panel** (F7) provides access to the **Working Folder** where video recordings are stored.

The **Status Panel** (F8) displays application status information and sequence marker list.

The **Save** (F2) button allows saving or exporting current selection. Output format can be changed on the [Export Settings](#) page.

2.6 Bottom View

Apart from the timer, this area is mostly used when reviewing a sequence in progress or playing back a recorded video. It includes tools to help you locate specific sections and frames.

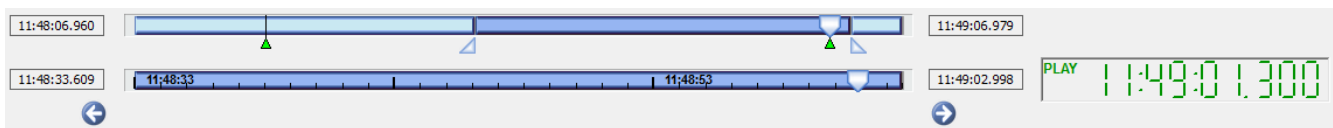

The **Timer** displays the time stamp of the current frame in three possible colors:

- **Blue** - indicating the camera is displaying live images;
- **Green** - indicating a time stamp in the past. (i.e. you are playing back a recorded sequence, or reviewing part of a live recording in which case a red 'REC' indicator is flashing);
- **Red** - live images are being displayed and recorded.

The **Coarse Slider** lets you quickly search and isolate a specific section within a sequence. It can be used either while recording (to review an earlier portion, as explained in the [Reviewing while Recording](#) section) or during playback of a recorded sequence.

The **Fine Slider** lets you find exactly the frame you want within the current selection range of the Coarse Slider. The selection range is represented by the blue section of the Coarse Slider and can be set as described in the [Defining a Selection Range](#) section.

2.7 Language Localization

TroublePix provides support for language localization allowing to translate and adapt the user interface language for specific countries, regions or groups.


Translations are stored to XML files containing a string map and organized by resource type: menus, dialog items and strings. TroublePix distribution includes French and German translations, but any other translation would be very welcomed. You can contribute adding support for more languages simply by translating the **English** strings found in the provided **en-US.xml** template language file, to your language of preference. We encourage you to submit your translation to NorPix by email at support@norpix.com to be included in the standard TroublePix distribution.

3 Operating TroublePix

3.1 Loading a Grabber

In order for TroublePix to capture images, it must be connected to a supported video capture device (a camera or a frame grabber). By default, the first time you launch TroublePix, it will connect to **NorPix Virtual Grabber** - a software component that simulates a frame grabber, streaming images with a set of bouncing rectangles.

To obtain a real image, TroublePix must be connected to a camera. Start by selecting the **Hardware | Load Grabber...** (Ctrl+G) menu. A dialog will pop-up, showing all available drivers. Select the camera or frame grabber you wish to connect to, then click **Load**. If your grabber does not appear in the list, please refer to the [Register Manager](#) section.

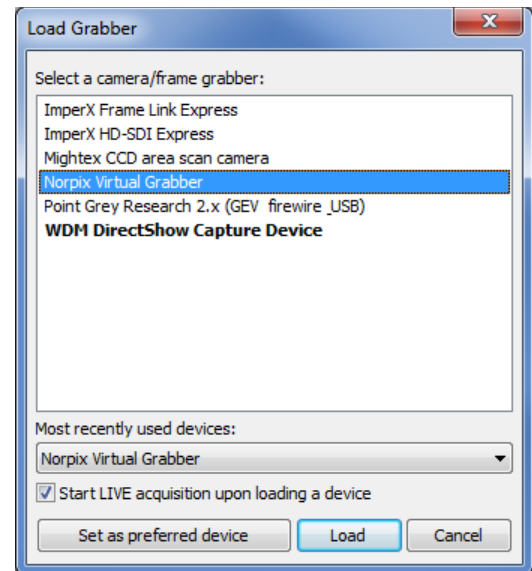

Optionally, you can set a grabber as “preferred device”. Once set, there's no need to open this dialog again. Simply go to the **Hardware** menu and click on the **Load Preferred Grabber** (Ctrl+Alt+G) menu.

Typically, when loading a grabber, it starts capturing images immediately, but sometimes this behavior is not desired. If you don't wish the grabber to immediately start capturing images, uncheck the **Start LIVE acquisition...** option. This might be helpful when using frame grabbers, because they often attempt to load a configuration file that may not be defined yet.

Once your video capture device is loaded successfully¹, LIVE feed from the camera will be displayed on **Camera View**. The device automatically captures images unless the camera is set to **trigger mode** and no trigger pulse is running. To toggle the LIVE feed on or off, select **LIVE** (Ctrl+L) from the **Hardware** menu. Depending on the camera or grabber you are using, the video capture process may make greater or lesser demands on your computer's CPU. You may occasionally wish to suspend LIVE capture temporarily to free up CPU resources for other processing.

¹ Loading an video capture device can fail if the grabber or camera is not connected or is currently being used by another application. Please refer to the [Camera Installation Manual](#) for specific information about configuring and using your camera or frame grabber.

3.2 Adjusting Grabber Properties

TroublePix is built to support a wide variety of image capture devices. Many grabbers have unique or non-universal properties and settings. To access camera features, select **Hardware Properties** (Ctrl+H) or **Live Adjustments** (Ctrl+J) from the **Hardware** menu.

Note that when you select **Hardware Properties**, TroublePix has to stop reception of images. This is because a change to these settings can require profound software reconfiguration that cannot be achieved while capturing.

In contrast, **Live Adjustments** are grabber or camera settings that can be changed while the camera is streaming. Typically, exposure, gain and brightness are live adjustable on most cameras. On most video capture devices live adjustments are also available when they are not streaming.


For quick access, you can adjust camera parameters on the [Camera Settings](#) and [Adjustments](#) pages located on the **Camera Panel** and explained below.

3.2.1 Camera Settings

On this tab you can control certain camera features that provide a set of discreet values to chose from. Which features are presented will depend on your video equipment. Alternatively, camera settings can be controlled via the [Grabber Properties](#) interface. Please note that during recording the content of this tab is read-only since changing a value would break off the acquisition process.

A region of interest (ROI) is a sub-area within the entire camera field of view identified for a particular purpose. Some cameras support defining a region of interest only if certain conditions apply or may not support it at all.


Please note that for most frame grabbers, the ROI must be changed in the grabber configuration file.

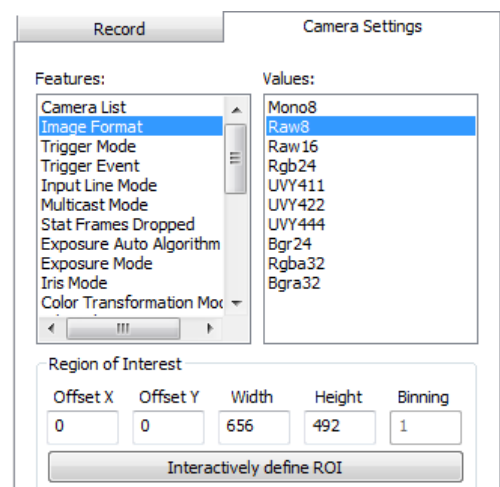

To define a ROI you can either type the image offset and size values, or click on the **Interactively define ROI** button and use the mouse to define it. Dragging toward the bottom-right corner of the image defines a ROI. Dragging toward the top-left corner of the image will reset the camera to its maximum possible ROI.

3.2.2 Adjustments

Allows adjusting certain camera parameters that provide a range of values and typically can be changed while camera is streaming. Which features are presented, if any, will depend on your video equipment. For example, on most cameras you can adjust the exposure, gain or brightness while capturing images. Features adjustable while live are called **live adjustments**. However, certain camera features are not adjustable while streaming such as **Packet Size** for GigE cameras. To adjust these parameters, you must turn off the live stream first.

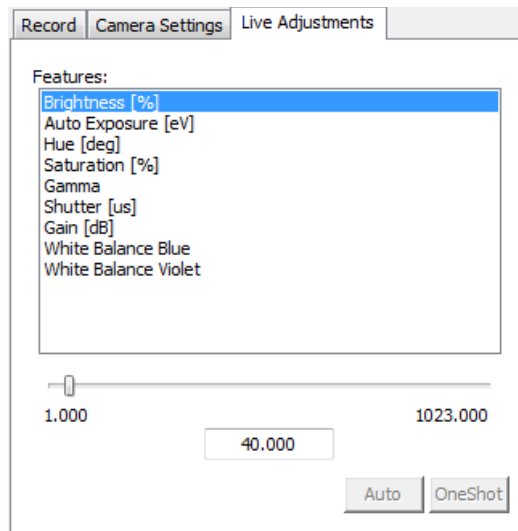

Adjustments can be changed either by dragging the slider or by typing a value in the text box.

Some cameras support the **Automatic** and/or **One-Shot** modes, in which the camera attempts to adjust itself and find the best possible values.


Alternatively, adjustments can be controlled via the [Grabber Properties](#) interface.

3.2.3 Serial Communication

This tab is designed for certain cameras and frame grabbers that provide support for serial communication.

To configure the serial communication parameters, please refer to the **Camera Installation Manual**¹ (document distributed with TroublePix) in the section related to the camera/frame grabber you are using.

Also refer to your camera/frame grabber user guide for information about what serial commands are supported.

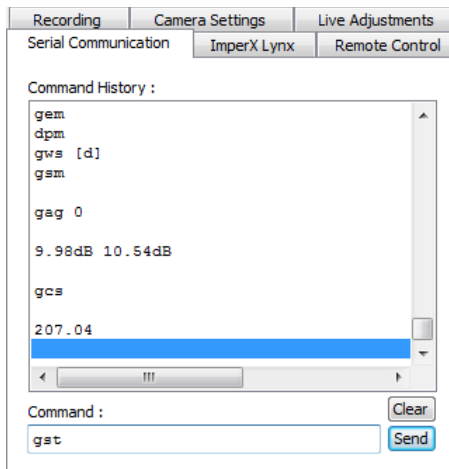

¹ Default installation path: <C:\Program Files\Common Files\Norpix\Help\Grabbers.pdf>

3.3 Recording

It's easy to start recording with TroublePix. At the minimum, just set a couple of parameters on the Record tab (see the [Setting Up a Recording](#) section) and you're ready to go!

- Select whether you want video storage to be in RAM or on the hard drive;
- Define a recording length (either in time or number of frames);
- Click on the **Record** button (or press F5);

TroublePix will immediately start recording LIVE images received from the camera. Recording will continue until you click the **Record** button again, or if you haven't selected loop mode till the end of your predefined record length.

When recording to disk, frames are stored either to a sequence (.seq) or movie (.avi) file. Files are automatically named by TroublePix, based on the time stamp when the recording began. You can chose between recording to sequence or AVI file format by selecting the appropriate output file format on the [Recording Settings](#) page.

When recording to RAM, the sequence is held in computer's memory until is closed. **Please note that only sequence files can be recorded to RAM.**

3.4 Setting Up a Recording

On the **Record** tab you can adjust recording parameters, as explained below.


The **Destination** is where captured frames are stored. Recorded frames can be stored either to the computer's random access memory (RAM) or to its hard disk drive. RAM is fast but typically limited in size, and of course not permanent. Therefore, select **Memory** only when the video sequence is relatively short. For longer records, select **Hard Drive**. Since disk drives are slower than RAM, recording to the hard drive may not be able to keep up with the frame rate from the camera. Contact NorPix support for computer specifications required to work best with your camera/frame grabber and recording conditions.

When recording to disk, all output files are located in the **Working Folder**, whose content can be accessed via the [History Panel](#). To change the working folder location, please refer to the [Recording Settings](#) section.

The **Video Buffer** section refers to the file or memory zone where the captured frames are stored. The maximum size of the buffer can be calculated in number of frames or time. When in time, the calculation is based on the camera frame rate. The size limit is relative to the available space. Available RAM and disk space may both fluctuate considerably depending on computer's activity. Click the **Refresh** button to reset the slider's indication of maximum possible recording length as determined by the space available at that moment.

The **Loop** section lets you set loop recording parameters. Loop recording means that when your predefined record length fills up, TroublePix continues recording overwriting older frames from the beginning of the video buffer. For example, with a record length of 5 minutes, you get a sliding window of 5 minutes of captured history that continuously moves forward with the present. Loop recording can run for days without clogging computer resources, since only a limited number of frames are stored.

During a review of the last loop, the recording position may reach the area being reviewed, in which case two options are available: **Overwrite** and **Stop Recording**. If **Overwrite** is selected, TroublePix

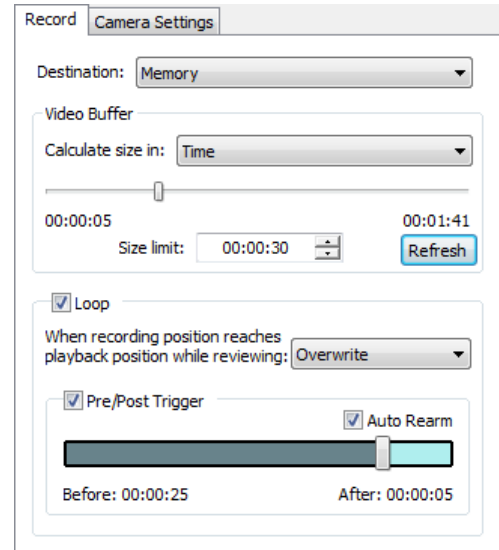


will break out from review mode, returning to LIVE display as otherwise it would overwrite what you are reviewing. If however **Stop Recording** is selected, TroublePix stops recording before the collision occurs. Reviewing is discussed in more details in the [Reviewing while Recording](#) section.


The Pre/Post triggering is a special recording mode allowing the user to record before and after a specific event occurs. When TroublePix catches the event, automatically stops the recording after a certain amount of time has elapsed or a number of frames have been captured. For more details please refer to the [Pre/Post Triggering](#) section.

3.5 Pre/Post Triggering

The **Pre/Post Trigger** module configures TroublePix to focus on recording images only around a specific trigger event. Adjust the slider to define how much time (or how many frames) should be stored **before** the trigger event (**Pre-Trigger**) and how much should be stored **after** (**Post-Trigger**).

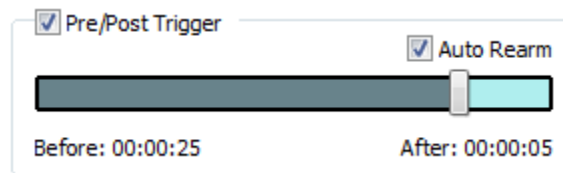

Note that due to the nature of **Pre/Post Trigger** mode it can only be used when recording in loop. When a Pre/Post event is triggered, either by an input action (see [Input Control](#)) or using the keyboard (space bar) or other sources, TroublePix will continue recording for the **Post-Trigger** duration, then stop automatically. The resulting sequence will include what happened before and after the trigger event. The event will be indicated on the **Coarse Slider** as a yellow triangle. To go directly to this position, right-click in the **Coarse Slider** and select **Jump to Pre/Post Event**.

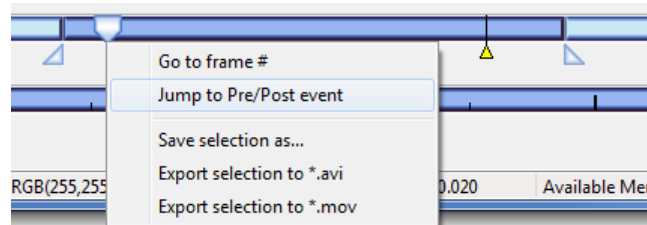

For more information about how to configure TroublePix to receive a **Pre/Post event** from an external input device, please refer to the [Input Control](#) section.

The **Auto Rearm** option resets the system and lets you continue recording even after a Pre/Post event stopped a recording. With this option selected, when recording ends, a new file will be created

automatically and TroublePix will carry on recording, either until it runs out of space or you uncheck **Auto Rearm** box or manually stop the recording. When recording to RAM, the current sequence is automatically saved to the **Working Folder** before creating another one.

3.6 Marking Frames

The primary function of TroublePix is to monitor evolving processes and help you troubleshoot them. A typical application would be to monitor a production line, linking images with external events that would be generated when failures occur.


TroublePix can monitor and record multiple events triggered by multiple sources. Each captured event is associated with an image, based on its time stamp and index in the sequence file. All this information is presented on the graphical interface by a green symbol called **marker**.

3.6.1 Marker List

Markers are displayed on the **Markers** tab window. Each marker displays the information below:

- ➔ marker index and name;
- ➔ frame index and time stamp associated with the marker;
- ➔ relative time to a reference time stamp (see [Time Stamp Settings](#));
- ➔ relative time to previous marker;
- ➔ a description;
- ➔ an icon whose color indicates whether the marker is valid or not (green = valid, gray = invalid).

While recording, the **Marker List** cannot be accessed, so all of the markers appear grayed out. However, the list is available in **Review** or **Playback** mode, allowing access to valid markers only.

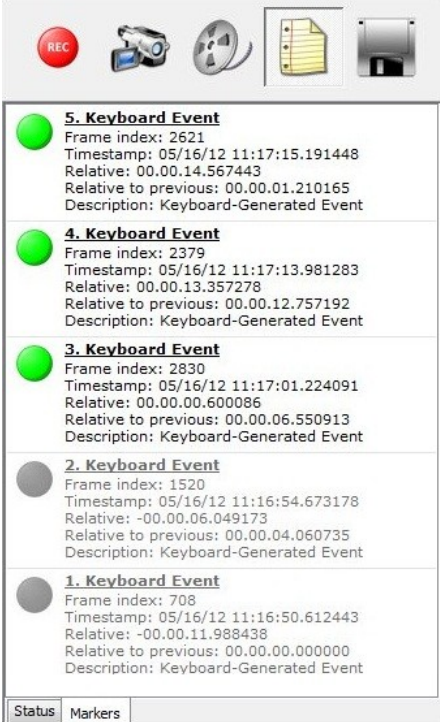

Marker Index	Marker Name	Frame Index	Timestamp	Relative	Relative to previous	Description
5	Keyboard Event	2621	05/16/12 11:17:15.191448	00.00.14.567443	00.00.01.210165	Keyboard-Generated Event
4	Keyboard Event	2379	05/16/12 11:17:13.981283	00.00.13.357278	00.00.12.757192	Keyboard-Generated Event
3	Keyboard Event	2830	05/16/12 11:17:01.224091	00.00.00.600086	00.00.06.550913	Keyboard-Generated Event
2	Keyboard Event	1520	05/16/12 11:16:54.673178	-00.00.06.049173	00.00.04.060735	Keyboard-Generated Event
1	Keyboard Event	708	05/16/12 11:16:50.612443	-00.00.11.988438	00.00.00.000000	Keyboard-Generated Event

Markers are listed chronologically, with the most recently captured event on top of the list.


3.6.2 Valid vs. Invalid Markers

Valid markers are linked to existing frames and shown as green symbols. However, if a marked frame gets overwritten during a loop recording, the associated marker will become invalid since it no longer corresponds to an image. Invalid markers are shown as gray symbols.

3.6.3 Adding or Removing Markers

Usually frames are marked based on events captured from external I/O devices. However, in some scenarios where such a device is missing a keyboard-generated event can be used to simulate an external trigger. Frames can be marked during recording by using the F11 keyboard shortcut.

Note: For better accuracy it is highly recommended to use an external I/O device.

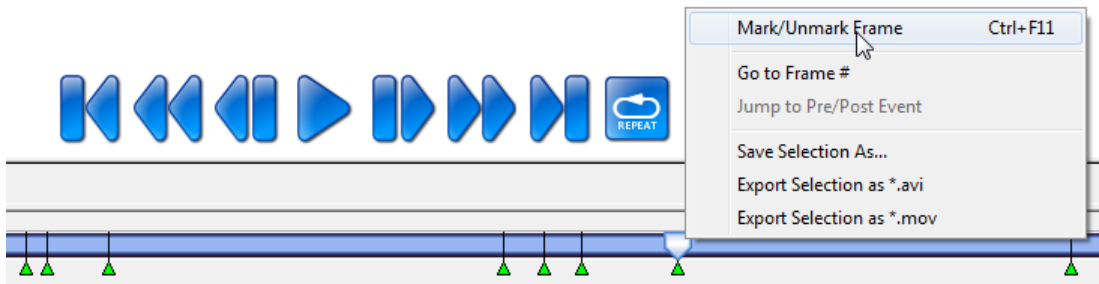


During playback a frame can be marked/unmarked as follows:

- using the **Coarse Slider** locate the frame you want to mark/unmark;
- right click on the slider thumb and select **Mark/Unmark Frame** (Ctrl+F11) from the contextual menu.

3.6.4 Browsing Markers

Valid markers are presented on the **Coarse Slider** as green triangles. Moving the mouse pointer over a green triangle will display an information window describing the marker.


Valid markers can be easily browsed. Either click on a green triangle on the **Coarse Slider** or a green icon on the **Marker List** to display the related frame. Alternatively, you can use Ctrl+Left Arrow to jump to previous marker or Ctrl+Right Arrow to jump to the next one.

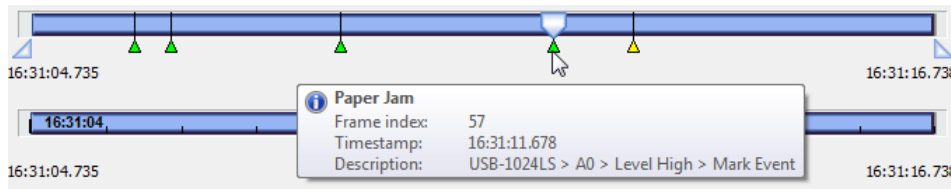


3.6.5 Editing Markers

Some information about valid markers are editable during playback or review mode only. To edit a marker simply locate it in the **Marker List** and follow one of the procedure below:

- right-click on it and select **Edit** from the popup menu.
- double-click on it.
- press the Enter key.

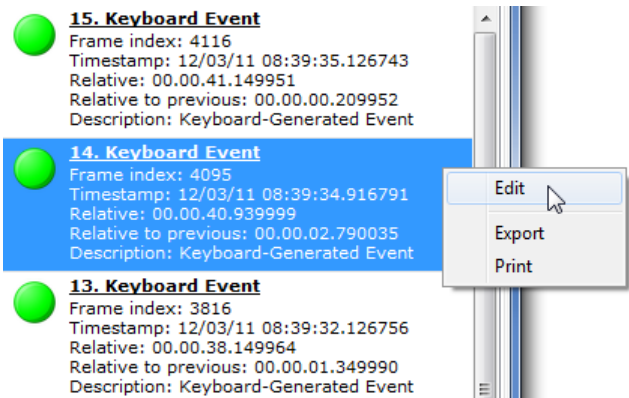

You'll be presented with a dialog asking for a marker name and description. When done, simply click OK or press Enter to apply the changes.

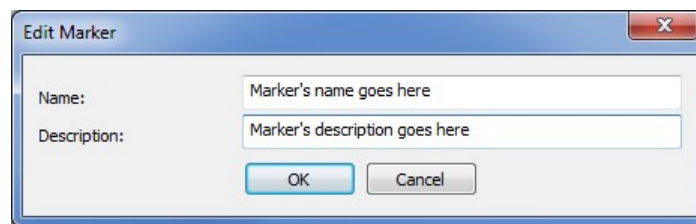


3.6.6 Exporting Markers

Marker list can be exported as Microsoft Excel™ (*.XLS) or Comma Separated Values (*.CSV) file.

To export markers, right-click on the **Marker List** and select **Export** from the contextual menu.


Note: Exporting as PDF file may be possible. To find out more, check out the [Printing Markers](#) section.

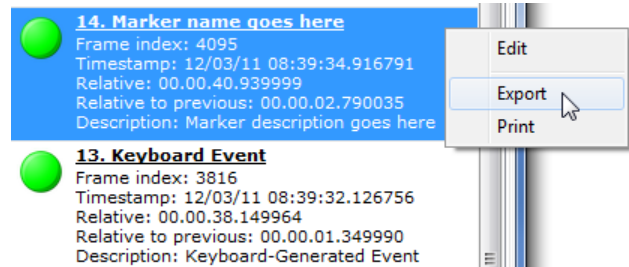

3.6.7 Printing Markers

To print out markers right-click on the **Marker List** and select **Print** from the contextual menu.

Note: a virtual printer driver with PDF support can be installed to have markers printed to a PDF file.

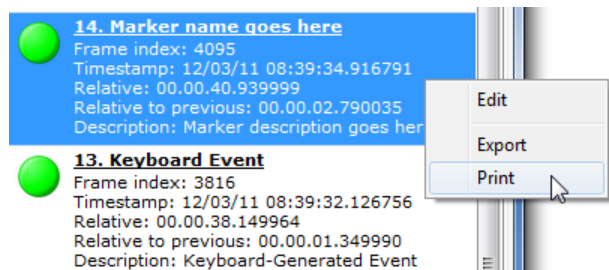

3.6.8 How Markers Are Stored?

Markers are saved to separate XML files. The marker history file for a given sequence will have the same file name as the sequence, with only the extension being different. Deleting such file eliminates all information about the marked frames in the sequence.

While recording, the complete history of captured events is temporarily stored in memory. If recording to disk, when recording ends the markers are saved to disk automatically, using the naming convention explained above. If the sequence was recorded to memory however, the markers are only saved to disk if the sequence itself is saved. Otherwise, they are stored in memory until the sequence is closed (destroyed).

3.7 Input Control


Allows controlling TroublePix externally, for example using output from a PLC device on a production floor. Input control is performed using a digital input device through which TroublePix will monitor input levels over an input line. An **input event** is defined as low to high (rising edge) or high to low (falling edge) input level transition. When detected, it triggers TroublePix to perform a specific **action**.

Currently, the following predefined actions can be triggered:

- **Start Recording**
- **Stop Recording**
- **Toggle Recording**
- **Pre/Post** - generates a specific event for use while in Pre/Post Trigger mode to control the recording.
- **Mark Frame** - marks a specific frame while recording.
- **Save Frame** to save or discard a frame while recording, based on the input level. If input level is HIGH, the frame is saved to the sequence. If LOW, the frame is discarded.
- **Toggle Save Frame** to save or discard a frame while recording, regardless the input line level. By default, all frames are saved.
- **Line Testing** to test the status of input lines during setup. Each time an event is detected, TroublePix displays information about it. To test a specific line, add an event on that line and send a pulse to trigger the event. Check the application activity log on the **Status Panel** to see if the event was detected correctly.

Note: More actions could be added at the user's request.

The Input Control tab displays information related to input devices, input event to monitor and actions to take. To create a new event, double-click on the **[Add new event...]** line or click on the **Add** button. To modify an existing event, select it from the list and adjust its parameters. To delete an event, click on the **Delete** button.

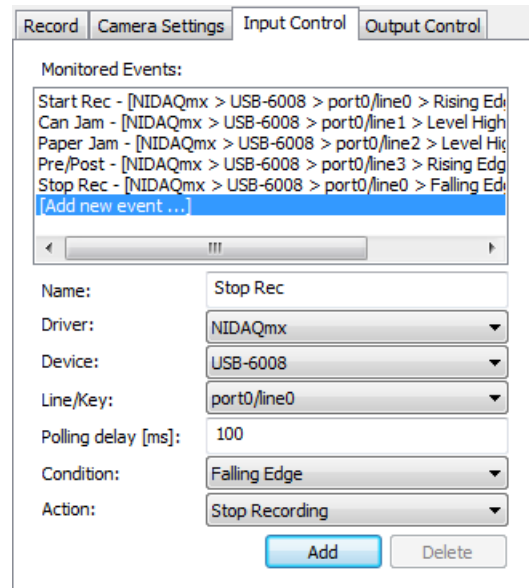

There are several parameters to set:

- **Name** - a user defined name of the monitored event.
- **Driver** - a list of all I/O drivers supported by TroublePix that successfully initialized an input device. The input device must be properly installed and connected to the computer.
- **Device** - a list of all input devices detected by TroublePix. The source may be a grabber (frame grabber with input support) or an external device. For a list of all supported external I/O devices, please visit <http://www.norpix.com/support/compatibleio.php>.
- **Line/Key** - a list of all available input lines for the selected device.
- **Polling delay** - the interval at which the input line will be polled. If the value is too low, non-stop polling will occur, needlessly consuming system resources. However, a very high value might miss an event. For instance, if the input signal goes from low to high and back to low between two polling actions, TroublePix would not notice any change. If you are using a USB device the polling delay should not be under 10-15 ms, as the typical response time for such devices is around 10 ms.
- **Condition** - the condition to monitor: Low Level, High Level, Rising Edge or Falling Edge.
- **Action** - the action to be taken when the condition is reached. See above for possible actions.

3.8 Output Control

This tab allows configuring TroublePix to change the state of a digital output line when a specific event occurs.

The following TroublePix events are supported:

- **On Start Streaming**
- **On Stop Streaming**
- **On Start Recording**
- **On Stop Recording**
- **On Pre/Post Event**
- **On Mark Frame**

Note: More events could be added at the user's request.

The screenshot shows the 'Output Control' configuration window. At the top, there are four tabs: 'Record', 'Camera Settings', 'Input Control', and 'Output Control'. Below the tabs is a list of 'Monitored Events' with the following entries:

- OnStartRec - [NIDAQmx > USB-6008 > port0/line4 > On Sta
- OnPrePost - [NIDAQmx > USB-6008 > port0/line5 > On Pre/
- OnStopRec - [NIDAQmx > USB-6008 > port0/line6 > On Stop
- [Add new event ...]

Below the list, the configuration for the selected event 'OnStopRec' is shown:

- Name: OnStopRec
- Driver: NIDAQmx
- Device: USB-6008
- Line/Key: port0/line6
- Source Event: On Stop Recording
- Reset: Auto Timeout [ms]: 500
- Output: Level High

At the bottom right, there are 'Add' and 'Delete' buttons.

There are several parameters to set:

- **Name** - a user defined name of the event.
- **Driver** - a list of all I/O drivers supported by TroublePix that successfully initialized an output device. The output device must be properly installed and connected to the computer.
- **Device** - a list of all output devices detected by TroublePix. The source may be a grabber (frame grabber with output support) or an external device. For a list of all supported external I/O devices, please visit <http://www.norpix.com/support/compatibleio.php>.
- **Line/Key** - a list of all available output lines for the selected device.
- **Source Event** – a list of all available TroublePix events.
- **Reset** - allows configuring how the output level will be reset. Available values are: **Never**, **Auto** and **Toggle**.
- **Output** - the output level to be set when the event occurs.

3.9 Review vs. Playback


The words “Review” and “Playback” refer to two different things in TroublePix:

- **Review**¹ refers to examining an earlier portion of what is currently being recorded.
- **Playback** refers to playing back a previously recorded sequence.

Playback can be done with any recorded sequence, regardless of it was recorded to RAM or disk. Review can only be done with the sequence currently being recorded. Since you don't have to stop recording to examine previously captured frames, the Review helps ensure that no potential event is missed while you analyze what has happened so far. In Review mode frames are displayed on **Camera View**, while in Playback mode they are displayed in different views, listed along the bottom of the **Display Area**.

There are a few ways to switch to **Review** mode while recording:


- Drag the **Coarse Slider** to the left until you reach the area you wish to review, or
- Click the **Lock/Unlock** pin button, or
- Use **F4** keyboard shortcut.

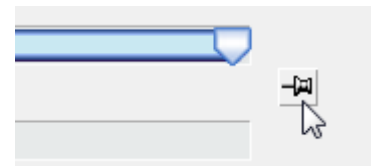

Dragging the **Coarse Slider** lets you select a review segment anywhere in the recorded stream. Click the **Lock** pin to the right of the slider for immediate reviewing access to the frames that were just recorded.

To return at any time to LIVE mode, use one of the method below:

- Right-click anywhere in a reviewed image and select **Back To Camera**, or
- Click the **Lock/Unlock** pin button, or
- Use **F4** keyboard shortcut.

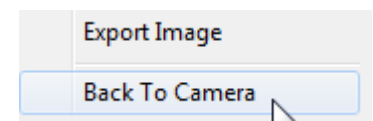


There are a few ways to navigate through a sequence while in **Review** or **Playback**:

- Drag the slider thumb to the desired location;
- Proceed frame by frame by clicking the **Next** and **Previous** buttons;

¹ The Review feature is not available when recording to AVI.

- Hold down the SHIFT key and click the **Next** or **Previous** button to go to the next or previous *small tick* on the **Fine Slider**;
- Hold down the CTRL key and click the **Next** or **Previous** button to go to the next or previous *big tick* on the **Fine Slider**.

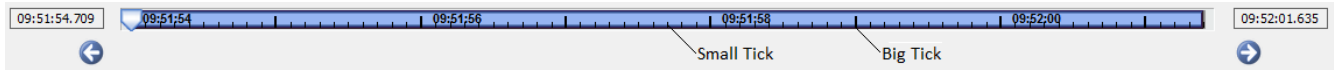


3.10 Reviewing while Recording

Reviewing while recording in **loop mode** requires special consideration. In loop recording mode, once the video buffer has been filled up, each new frame is recorded by overwriting the oldest one. This gives you a continuous sliding window that advances through time with the present.

When reviewing a frame in loop mode, the left side of the window is steadily approaching the reviewed selection (the blue area on the Coarse Slider). What happens when it reaches the beginning of the selection range? That depends on which **Collision Detector** option you selected on the **Record** tab of the **Camera Panel** (see the [Setting up a recording](#) section).

- **Overwrite** - TroublePix will break out of Review, returning to LIVE mode.
- **Stop Recording** - TroublePix will stop recording. The current sequence now becomes a recorded sequence and is loaded to a new **Playback View**, ready for playback.

To help you better understand how reviewing in loop mode works, TroublePix indicates the current recording position by a red triangle on the **Coarse Slider**. This represents the border between newer frames (the left side of the triangle) and older frames (the right side of the triangle).

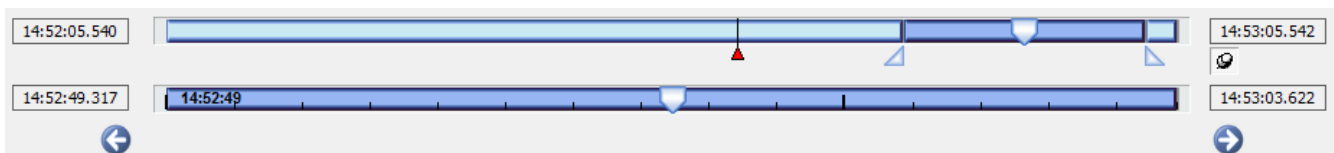

3.11 Playback

3.11.1 Loading a recorded video

To load a recorded video file from your current **Working Folder** and play it back, select the **History Panel** and either double-click on the file name or right-click on it and select **Open** from the contextual menu. To load a sequence file stored at any other location, go to **File** menu and select **Open Sequence**. You can also drag the file(s) from **Windows Explorer** and drop them directly onto the display area.

Playing back an AVI file is similar to sequence playback, meaning that you can operate the AVI files the same way you do with sequence files. Playback controls preserve the same functionality. However, playing an AVI file at different frame rates is not supported.

3.11.2 History Panel

Recorded video files are automatically named based on the current naming scheme and saved to the current **Working Folder**. The **History Panel** provides access to these video files.

Color coding indicates the status of each file:


- **Red** - indicates the file is in use for recording.
- **Green** - indicates the file is opened for playback.
- **Black** - indicates the file is available for playback.

To update the file list, click **Refresh**.


To delete (move to Recycle Bin) a file, click **Delete**.

To rename a file or view its properties, click **Properties**.

Optionally, small, large or thumbnail icons can be displayed by selecting the appropriate menu entry from the **View** popup menu.

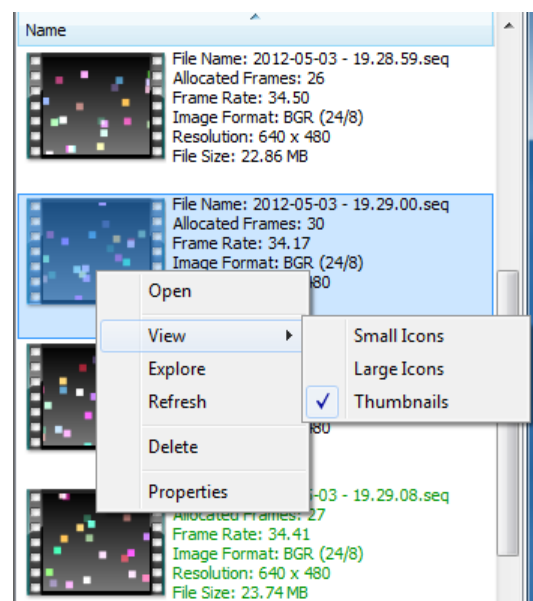


When moving the mouse pointer over a video file, important information is displayed on a tool tip window, such as image format and resolution, allocated frames, file size etc.

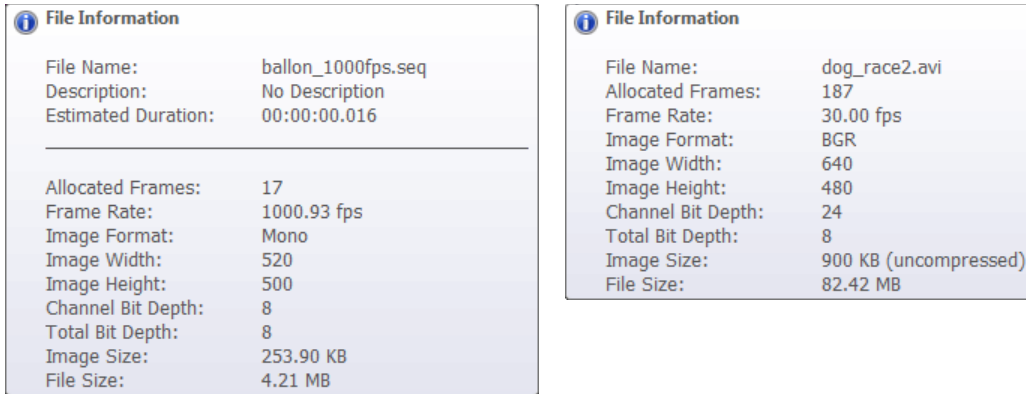

3.11.3 Defining a Selection Range

The **Selection Range** defines a portion of interest in the current sequence. It is represented by the blue section on the **Coarse Slider** that corresponds to the entire length of the **Fine Slider**. Defining a selection range is useful when just part of a sequence needs to be saved, or when searching for a specific frame in a particularly long sequence. The default selection range includes the whole sequence, so when you open a sequence, all frames are selected. To modify the selection range, drag the two small cursors located below the slider. A tool tip window will indicate the duration of the selection as you drag.

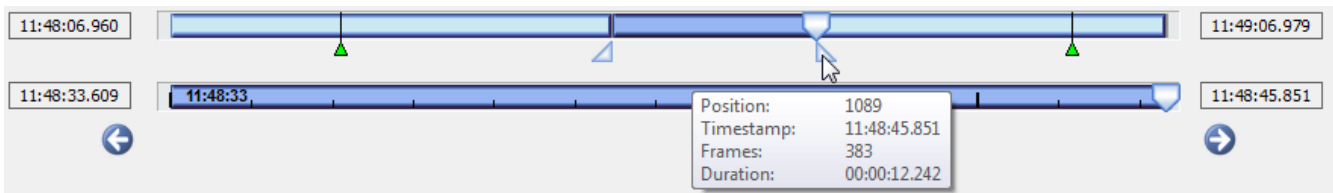











Each slider has two labels located at its extremities, giving the time stamps of the oldest and newest captured frames for the **Coarse Slider** and the beginning and the end of selection for the **Fine Slider**.

3.11.4 The Playback Bar

The **Playback Bar** provides the customary commands for use when playing back recorded sequences.

To be more accessible, the playback controls are displayed as an image overlay.

-  - jump to the start of the playback range
-  - rewind
-  - step back
-  - begin playback
-  - stop playback
-  - step forward
-  - fast forward
-  - jump to the end of the playback range
-  - repeat playback at the end of the playback range
-  - stop playback at the end of the playback range

Because the playback controls are displayed as an image overlay, you may want to apply a transparency factor to be able see the image underneath them. For more information on how to adjust the playback controls transparency, please refer to the [Playback Settings](#) section.


3.11.5 Controlling the Playback Speed

While playing a sequence you may wish to change the playback speed interactively. Use the **Up** and **Down** arrow keys to increase or decrease the playback speed respectively.

When playback begins, if your playback settings specify displaying the **Playback Speed Slider**, a semitransparent window will pop up. This window lets you control the playback speed, as explained below.

To increase **forward** playback speed (or slow down **reverse** playback) move the slider thumb to the right. To increase **reverse** playback speed (or slow down **forward** playback) move it to the left. To pause the sequence, leave it in the middle. The current speed is displayed as frames per second and percentage of the normal speed. To return to normal speed, set the slider position to 100%.

For more information about playback settings and how to force playback at a custom speed value, please refer to the [Playback Settings](#) section.

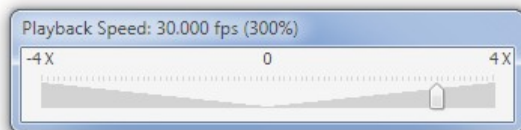

Note: Please be aware that when playing an AVI file the playback speed cannot be changed.

3.11.6 Thumbnail View

To view the content of a sequence using thumbnail view, open the sequence and activate **Show Thumbnails** (Ctrl+T) option from the **View** menu. Another way would be to right-click on the display and select **Thumbnails | Show Thumbnails** from the pop-up menu.

The images in the sequence are displayed as thumbnails.

Use the “+” or “-” keys to increase or decrease thumbnail size respectively.

Browse the sequence using standard scrolling keyboard shortcuts (Up, Down, Left, Right, Page Up, Line Up, Line Down, Page Down, Home, End keys). The mouse wheel, if present, can be used to scroll the view vertically.

Click on a thumbnail to get some information about it and move the playback position to that image, or double-click to disable thumbnail view mode.

Select **Thumbnails|Sub Sampling...** from the contextual menu to display thumbnails with a sub sampling rate.




3.12 Bayer Conversion

3.12.1 About Bayer Conversion

Bayer conversion is the process by which raw images from a Bayer camera are color-converted using a Bayer interpolation algorithm. Some cameras equipped with a Bayer filter will perform the color interpolation process before images are sent to output. However, most cameras do not do this, leaving interpolation to application level.

A **Bayer filter** mosaic is a color filter array for arranging RGB color filters on a square grid of photo sensors. The term derives from the name of its inventor, **Dr. Bryce E. Bayer** of Eastman Kodak, and refers to a particular arrangement of color filters used in most single-chip digital image sensors used in digital cameras, camcorders, and scanners to create a color image. The filter pattern is 50% green, 25% red and 25% blue, and hence is also called BGGR, GBRG, GRBG or RGGB depending on the color of the first pixel in a 2x2-pixel square.

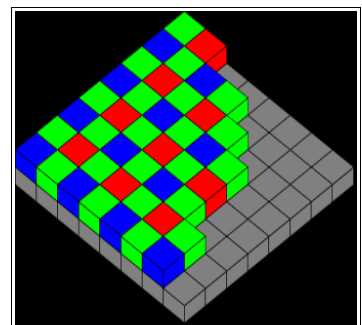

Bryce Bayer's patent called the green photo sensors *luminance-sensitive elements* and the red and blue ones *chrominance-sensitive elements*. He used twice as many green elements as red or blue to mimic the human eye's greater resolving power with green light.

The raw output of Bayer-filter cameras is referred to as a *Bayer pattern* image. Since each pixel is filtered to record only one of three colors, two-thirds of the color data is missing from each. To obtain a full-color image, various demosaicing algorithms can be used to interpolate a set of complete red, green, and blue values for each pixel. Different algorithms requiring various amounts of computing power result in final images of varying quality.

3.12.2 Bayer Conversion in TroublePix

TroublePix includes Bayer conversion functionality at display level only. That means TroublePix always records captured images in raw format as received from the camera and does not alter them in any way. Since a raw image contains all color information, Bayer conversion is performed only when needed, mainly when an image is being displayed, exported to an AVI movie or to an individual image file. This provides two significant advantages: raw image size is 3 times smaller than color images, and CPU resources are conserved (Bayer rendering is not quite computation-intensive).

Bayer conversion can be enabled by selecting **Bayer Conversion | Enable Bayer Conversion** (Ctrl+B) from the **View** menu.

Since there are 4 possible Bayer patterns, and a Bayer filter can be any of the various pattern types, you must select the **Bayer Pattern** that match the camera sensor. This is the 4-pixel color pattern in the top left corner of the sensor. If this information is unavailable, experiment different patterns until you find the one that produces images with correct color rendering. The four possible patterns are **GBRG** (Ctrl+1), **GRBG** (Ctrl+2), **BGGR** (Ctrl+3) and **RGGB** (Ctrl+4). The Bayer pattern can be changed recursively by selecting **Bayer Conversion | Change Pattern** (Ctrl+P) from the **View** menu.

Automatic color balance can be enabled/disabled by selecting **Bayer Conversion | Auto Color Balance** (Ctrl+C) from the **View** menu.

Default Bayer settings can be changed on the [Display Settings](#) page.

3.13 Adjusting the Zoom

TroublePix can display images using various zoom factors. The default zoom factor is 100% (1:1). That means one screen pixel corresponds to one camera sensor pixel. The zoom factor is reported on the bottom status bar and can be adjusted from the **View | Zoom** menu.

Also, the following keyboard shortcuts are available:

- add (+) key on the numeric keypad or Ctrl + '+' to zoom in;
- subtract (-) key on the numeric keypad or Ctrl + '-' to zoom out;
- multiply (*) key on the numeric keypad or Ctrl + '0' (zero) to reset the zoom to 100%.

When the **View | Fit Image to Window** (F10) option is checked, the image is stretched to use the entire display area, preserving the image aspect ratio. In this mode, the zoom parameter is ignored.

3.14 Displaying in Full Screen Mode

In **Full Screen** mode, all tool bars, status bars and window borders are hidden, letting the views fill the entire display area. To ensure access to some of the main features, a **Control Panel** is created at the top of the screen. The panel can be oriented either horizontally or vertically, so that it can be positioned on any side of the screen. The orientation can be changed from the pop-up menu, displayed when you right-click on the Control Panel's title bar.




To enable **Full Screen** mode, select **View | Toggle Full Screen** (F12). To go back, click on the **Exit** button on the **Control Panel** or simply use the F12 or Esc keyboard shortcuts.


Full Screen mode is compatible with a multi-display computer configuration.

3.15 Printing a Captured Image


TroublePix supports printing images from the current sequence. Depending on frame resolution you may need to adjust paper size and orientation. To setup your printer, select **File | Printer Settings...** (Ctrl+Shift+S).

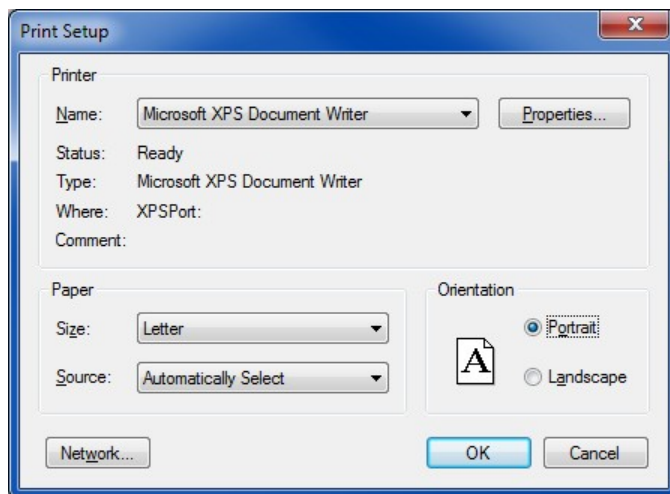


To preview the image before printing it, select **File | Print Preview** (Ctrl+Shift+V).

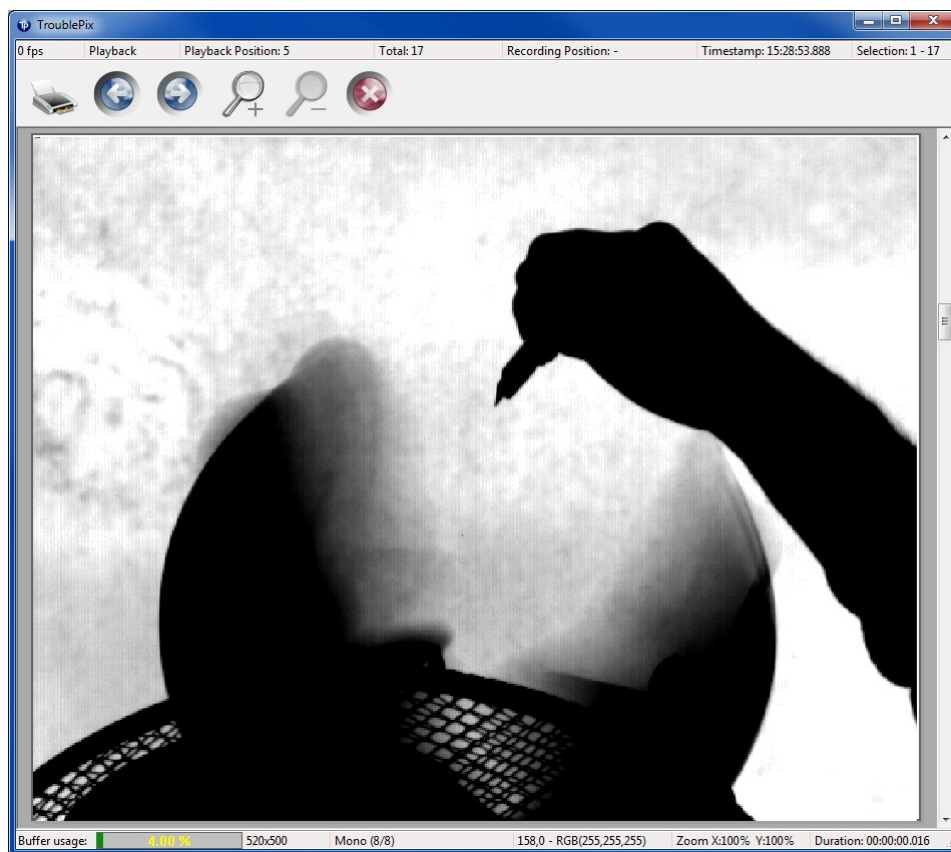

In playback mode, browse for a specific frame and select **File | Print** (Ctrl+Shift+P).

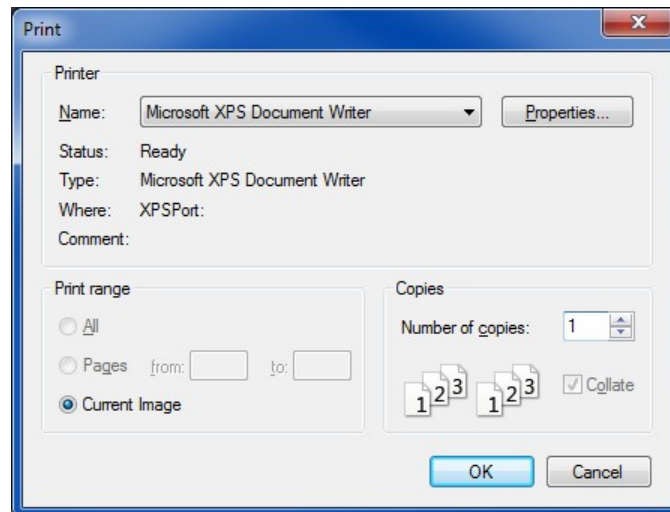

You can also browse the sequence directly from the **Print Preview** window using either the vertical scroll bar for a coarse search or **Previous, Next** buttons for a frame-by-frame search. When you are ready, simply click on the **Print** button to print out the image.

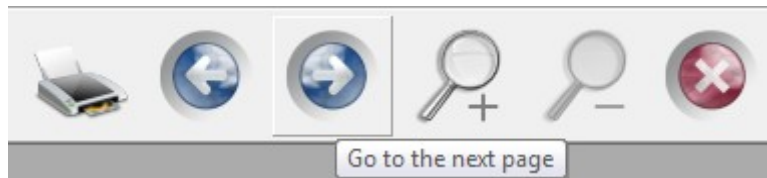

To increase/decrease magnification of preview image, click on **Zoom In / Zoom Out** button.

To exit the preview mode, click on the **Close** button.

3.16 Exporting a Captured Image

To export the current frame, use the **File | Export Image** menu entry or right-click on the image and select **Export Image**. This command lets you export the current frame as a **.bmp**, **.jpeg**, **.png** or **.tiff** file.

If in **Thumbnail View** mode, right-click on the frame you wish to export and click **Export Image**. You can also copy the desired frame to the clipboard, for later use in another application.




3.17 Saving or Exporting a Sequence

3.17.1 Saving a Sequence

Typically, when using TroublePix to troubleshoot processes you will want to save a small section of a given sequence. That section, is where you have found the relevant information; the remainder can therefore be discarded. Saving a **snippet** makes it easier to document a phenomenon efficiently.

If you have been recording a sequence and wish to save a snippet, click the **Save** button. Remember that the whole sequence must be selected in order to save the entire sequence.

Saving can only be performed in Review or Playback mode, when the upper status bar displays the range of frames in the current **Selection**.

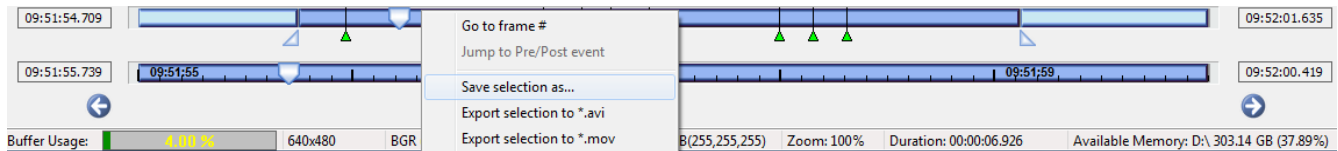


There are three ways to save a snippet:

- ➔ Click the **Save** button
- ➔ Select **File | Save As...** from the main menu
- ➔ Right-click on the **Coarse Slider** and select **Save Selection As...**

Note: Exercise care if you wish to save or export while TroublePix is recording fresh data to disk. Ensure that data transfer is well below your hard drive's maximum bandwidth, otherwise the recording process could be affected, resulting in frame lost.

When saving, you can add a **description** that will be stored in the header of the sequence file. This description will be displayed when the mouse pointer is over a file listed in the **History Panel**.

If you intend to store the sequence for an extended period of time, it is recommended that you use compression to save disk space. This dialog lets you to enable/disable compression and change compression parameters as needed. Default compression parameters are set on the **Compression Settings** page. For more details please refer to the [Compression Settings](#) section.

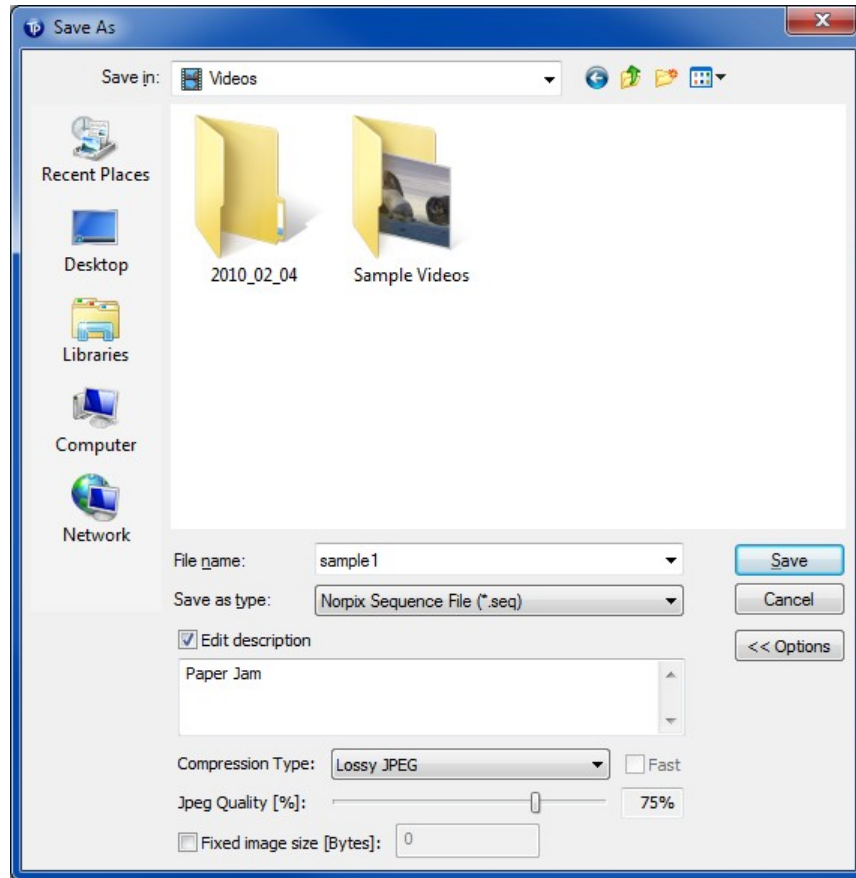

Note: when using JPEG compression, the sequence must be saved to a NTFS disk partition.

3.17.2 Exporting a Sequence to a Windows Movie File


When exporting a sequence to a Windows compatible file format, it is converted to a movie file with the **.avi** extension. AVI files can be displayed using a variety of media players and are easily shared. TroublePix also supports playback of AVI files.

There are significant differences between SEQ files and AVI files. SEQ files contain the image data in raw format, along with a time stamp for each and every frame and additional information such as a description. AVI files also contain the image data, but typically in compressed form, for a savings in disk space that may be offset by reduced image quality depending on codec settings. AVI files do not include frame-specific time stamps, nor would they include your description.

Exporting a sequence as AVI movie clip is similar to saving a sequence, except that the **Save As** dialog lets you select and configure the video codec to perform compression and reduce file size.

There are two ways to export a snippet as AVI:

- ➔ Select **File | Export To | Windows Movie** (Ctrl+W) from the main menu;
- ➔ Right-click on the **Coarse Slider** and select **Export selection to *.avi**

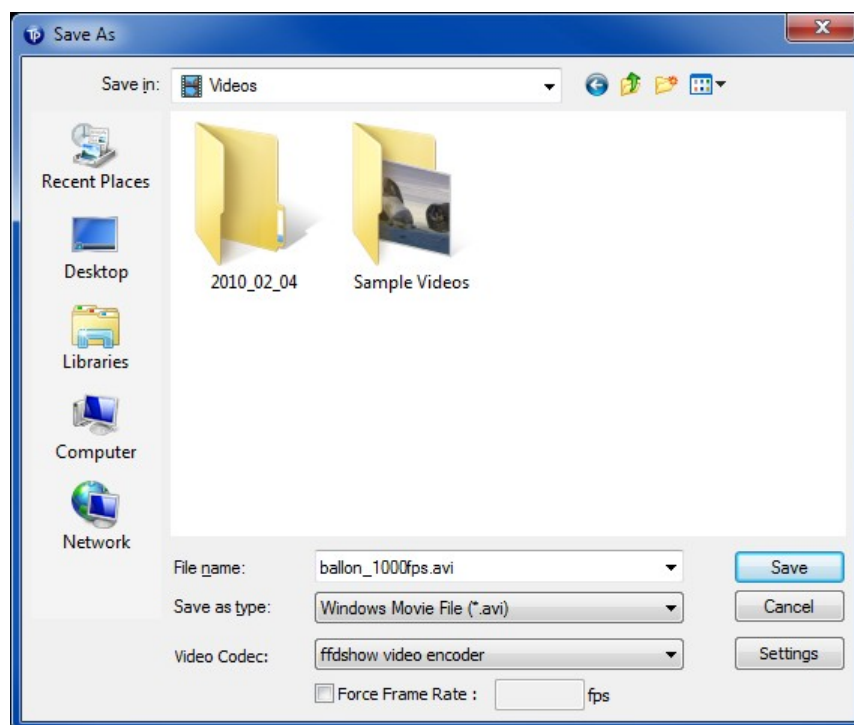


3.17.3 Exporting a Sequence to a QuickTime Movie File

Exporting a sequence as QuickTime movie (*.mov) is similar to exporting as AVI.

There are two ways to export a snippet as .mov file:

- Select **File | Export to | QuickTime Movie** (Ctrl+Q) from the main menu;
- Right-click on the **Coarse Slider** and select **Export selection to *.mov**;

Either way, unless the **Quick Save** mode is enabled, the following **Save As** dialog will show up, prompting for a file name and video encoding settings:

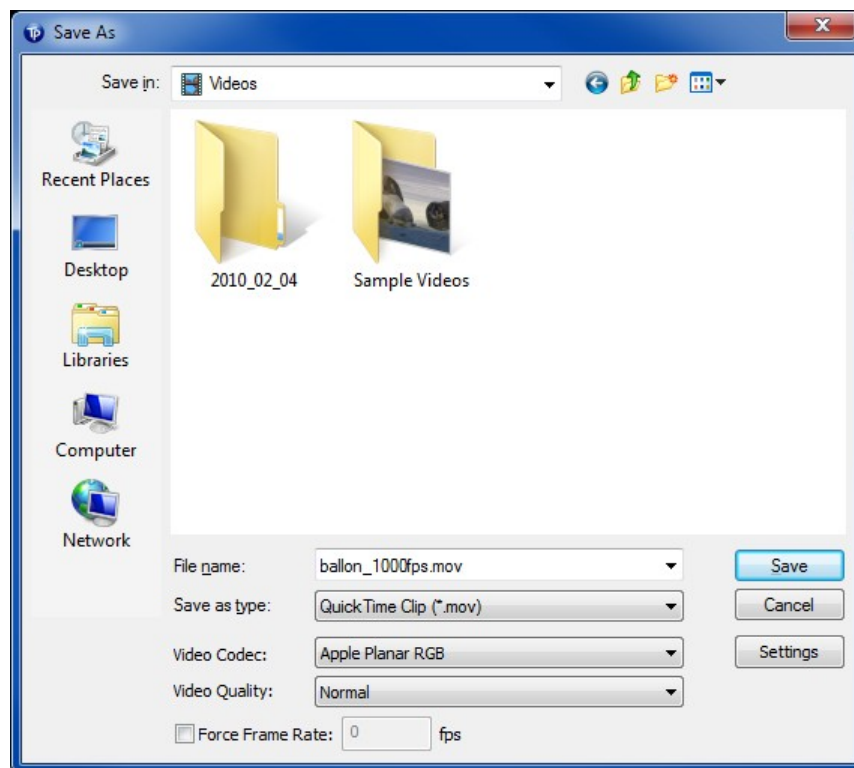

If the selected codec offers additional settings, clicking on the **Settings** button will display a codec specific custom dialog. For most codecs, a higher **Video Quality** will result in a larger file.

To get an uncompressed QuickTime file, choose **Apple None** as video codec. Finally, note that some codecs will put watermark on the images or simply won't work if you don't have a license.

4 Status Information

Logs are essential to understanding the activity of computer programs, particularly when problems occur.


In software engineering, a log serves to record information about a program's execution. This information is typically used by programmers for debugging. It can also let the user observe an application's internal status and better understand what's going on.

For example, suppose TroublePix is unable to load the grabber you wish to use. The log recorded as TroublePix attempts to perform this action could provide an indication of the cause that generates the problem.

TroublePix provides a built-in logging feature. When enabled, status information is added to the **Status** tab.

To enable/disable this feature, select **Resume/Suspend status log** from the contextual menu.

The **Save & Send** command lets you save the current log information to a file on your disk and automatically sends it to support@norpix.com via your current email client.

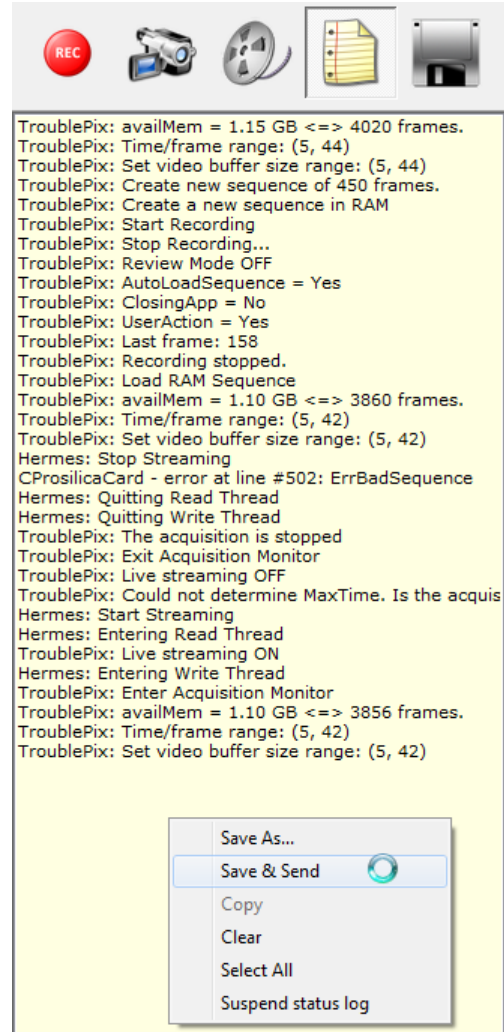

5 TroublePix Settings

5.1 Startup Settings

Mainly, this tab is used to adjust what TroublePix does at start-up.

In the **Grabber** section you can choose to reload the most recently used grabber or force the software starting with a specified grabber.


In the **Sequence** section, you can define whether or not TroublePix should reload the most recently opened disk sequence.

Check the **Jump to Pre/Post event** option to go directly to that position when a sequence is loaded. For more information about Pre/Post events, please refer to the [Pre/Post Triggering](#) section.

Speed up the application start-up by selecting not to load any I/O module or/and external plug-in. These options are not recommended if your system depends on one of these software components.

If you wish to have a log about TroublePix status, check **Enable status log**. For more information about logging, please refer to the [Status Information](#) section.

When the **Optimize layout for low screen resolutions** option is checked, the layout changes so that it fits better to a low screen resolution (typically less than 768 pixels in height). This option gets checked automatically if TroublePix detects a low display resolution at first start-up.

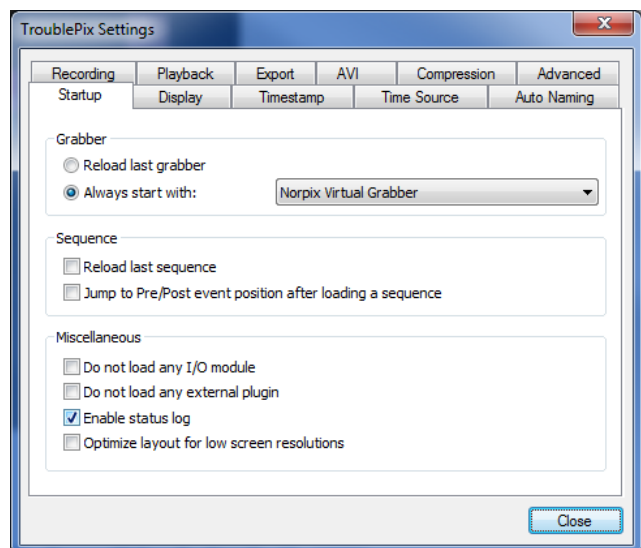


5.2 Display Settings

This tab lets you customize default settings for all views.

If you're capturing monochrome images with a Bayer sensor camera, an image conversion can be applied to get a color image. Click the **Enable Bayer Conversion** check box and select the Bayer pattern that matches the one used by the camera sensor. For more information about the Bayer conversion, please refer to the [Bayer Conversion](#) section.

The Bayer conversion alters only the displayed images, so when saving/exporting to another file, the images are not changed. To save/export Bayer processed images, select **Enable Bayer conversion for exports**.

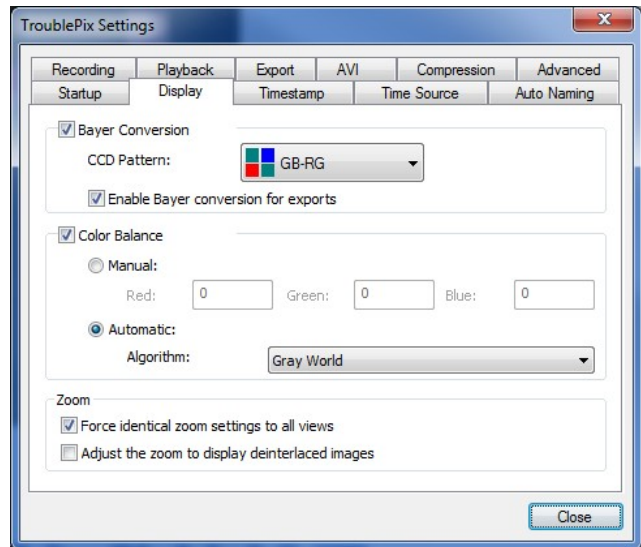

Color Balance (sometimes referred to as white balance) refers to adjusting the relative amounts of red, green and blue to ensure that neutral colors are reproduced correctly. The color balance can be adjusted either manually, by setting custom values for each channel, or automatically, using a predefined algorithm. That algorithm estimates the color balance of the first incoming image and applies it to all subsequent images. The choice of algorithms is explained below.

- **Mean equalization:** calculates the mean value of each channel, then adjusts each channel so that the mean values of the blue and red channels are equal to the green channel.
- **Gray world:** the sum of the red, green and blue channels is calculated, then adjusted so that the sum of the blue and red channels equals the green channel.
- **Standard deviation:** calculates the standard deviation of each color channel, then re-adjusts each to be 70 (on a scale of 1-256).
- **Mean equalization and Standard deviation (slowest):** adjusts the mean value of each channel to 128, and sets the standard deviation of each channel to roughly 70 (on a scale of 1-256).

In the **Zoom** section, select **Force identical zoom settings to all views** if all views should be affected in case of a zoom factor change occurs. Select **Adjust the zoom to display deinterlaced images** only if your camera supports interlacing.

5.3 Time Stamp Settings

Sometimes it might be very useful to know the exact time when an image was captured. To activate this feature, check **Timestamp Overlay** or select **Show Timestamp Overlay (Ctrl+V)** from the **View** menu.



You can customize the time stamp overlay appearance by changing the font name, size, text color, background color or position. Choosing identical colors for text and background will result in a transparent background.

If **Burn on image when exporting** is selected,

TroublePix will permanently write the time stamp onto every image exported, using the same font and color settings as the overlay. For a monochrome image, the overlay will be converted to its monochrome representation.

Time information can be displayed as absolute or relative value. Relative value is calculated based on a reference time, usually the time stamp of the first recorded frame. If you would like to change the reference time, simply click on the **Options** button and select one of the available modes for calculating the relative time.

Once set, the reference time is stored to the sequence when it's created and can not be changed.

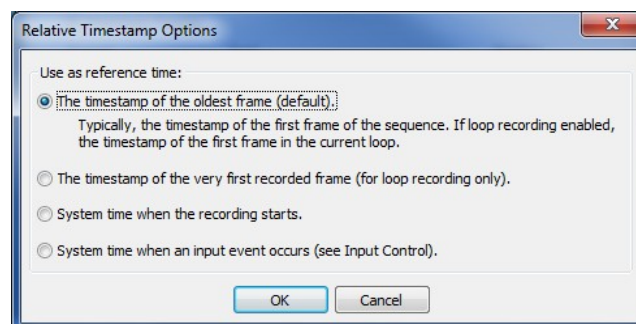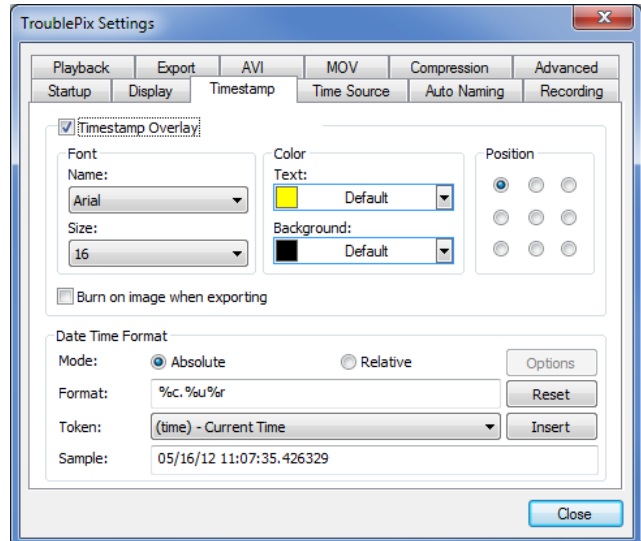


Time and date formats for time stamp representation are customizable. Insert different tokens to define a time and/or date format, noticing the sample output. To restore time/date formats to their default values, click on the **Reset** button.

A list of available time stamp tokens and their meanings is presented below:

Token	Description
%H.%M.%S	Current time
%Y-%m-%d	Current date
%a	Abbreviated weekday name
%A	Full weekday name
%b	Abbreviated month name
%B	Full month name
%c	Date and time representation appropriate for locale
%d	Day of month as decimal number (01 – 31)
%H	Hour in 24-hour format (00 – 23)
%I	Hour in 12-hour format (01 – 12)
%j	Day of year as decimal number (001 – 366)
%m	Month as decimal number (01 – 12)
%M	Minute as decimal number (00 – 59)
%p	Current locale's A.M./P.M. indicator for 12-hour clock
%S	Second as decimal number (00 – 59)
%U	Week of year as decimal number, with Sunday as first day of week (00 – 53)
%w	Weekday as decimal number (0 – 6; Sunday is 0)
%W	Week of year as decimal number, with Monday as first day of week (00 – 51)
%x	Date representation for current locale
%X	Time representation for current locale
%y	Year without century, as decimal number (00 – 99)
%Y	Year with century, as decimal number
%u	Milliseconds as decimal number (000 – 999).
%r	Microseconds as decimal number (000 – 999).

5.4 Time Source Settings

Image time stamping is typically performed when the image is received from the camera driver API. Because of that, it does not correspond to the exact time at which the camera sensor exposes. The delay is typically equal to the sensor read out time plus the transfer time needed for all pixels to be received inside the computer memory plus the time the Windows Thread Scheduler will need to notify TroublePix that a new frame is ready. This total time is dependent on the capture media and some other parameters like the pixel clock. At worst, when the media bandwidth is used at its maximum, the time stamp can be off by up to 1 fps.

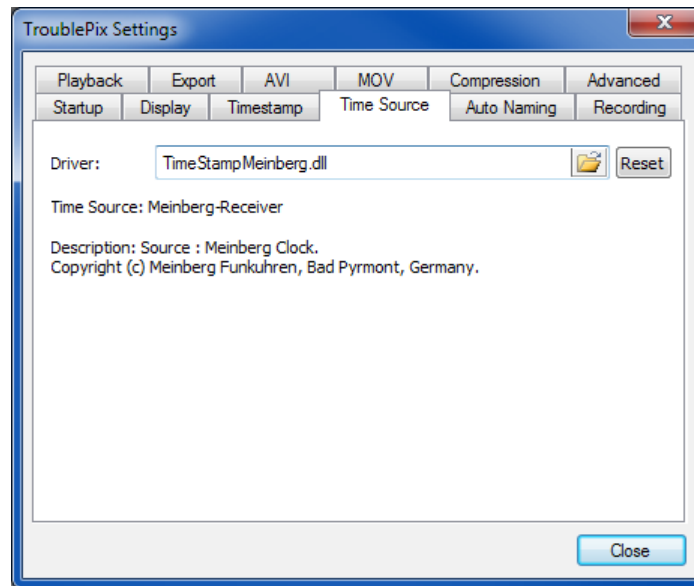

By default, each captured image is time stamped using the current computer time (System Clock). However, TroublePix also supports some other time source devices. For a complete list of supported hardware please visit the link below:

http://www.norpix.com/products/streampix5/modules/clock_synchronization.php.


Please note that the external time sources can be selected only if you have purchased the **External Time Source** option.

5.5 Auto Naming Settings

The **Automatic File Naming** feature is one of the many powerful TroublePix features that generates file names automatically without requiring user input each time a snippet is saved or exported.

By default, when TroublePix starts recording, it uses a standard method to generate file names. This behavior can be customized according to your preferences. Enable automatic file naming feature and type a naming scheme in the edit box, making sure that the resulting name will lead to a valid and unique file name.

We recommend testing the new scheme on a short recording before using it for a complete session. Once the naming scheme is in place, can be used either by creating new files via the **File** menu or by clicking on the **Save** button.

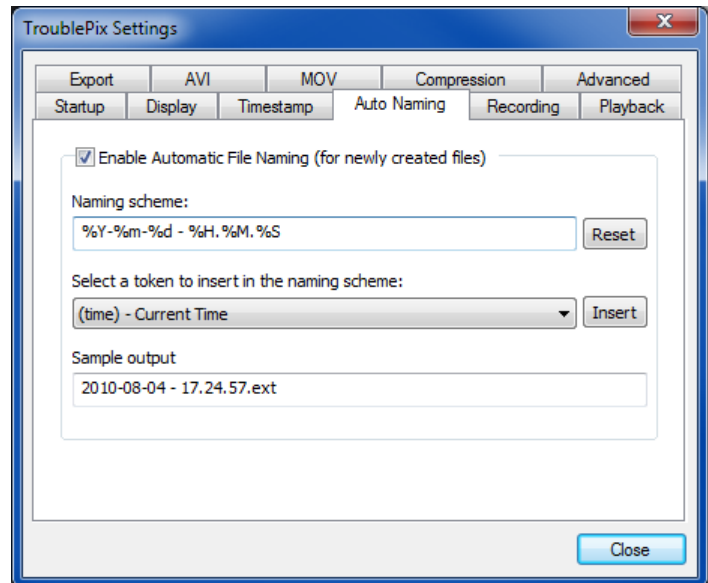


Naming schemes may contain predefined tokens as well as user-defined tokens. In most cases, the automatic file naming scheme should generate a unique file name. A common solution is to generate file names based on current system date and time. Therefore, the automatic file naming scheme shares the same list of [predefined time stamp tokens](#) used for defining a time stamp overlay format, presented in the [Time Stamp Settings](#) section.

The **Sample output** box displays an example of how an automatically named file would be saved.

5.6 Recording Settings

The **Working Folder** is where all output files are stored on disk. By default, this folder is named **Sequences** and created under user's **Documents**. To change the location, click the **Browse** button.

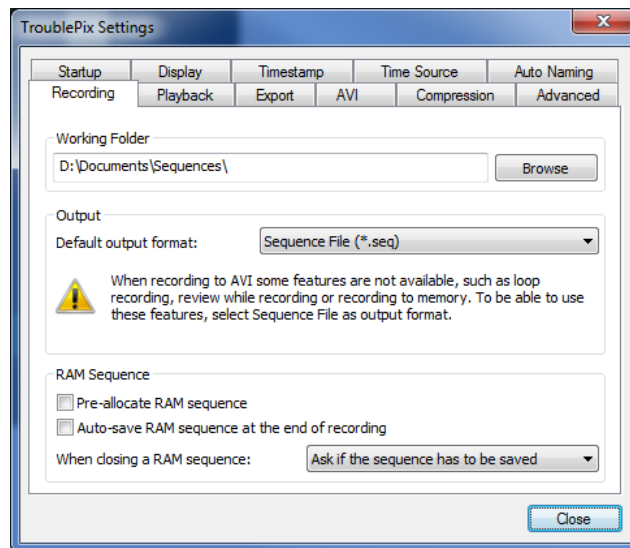

TroublePix can record in real-time live images as they are delivered by the camera. Two file formats are supported: **Sequence File (.seq)**, a NorPix proprietary video file format, and standard **Windows Movie File (.avi)** video file format. Please note that when recording to AVI format some features are not available such as loop recording, review while recording or recording to memory. To be able to use these features, it is required to select the **Sequence File** format as the default output format.


Pre-allocate RAM sequence option allows allocating and reserving the necessary amount of internal memory before starting a new recording to RAM. This will ensure that the video sequence will fit and the allocated memory can't be used for other purpose. Please note that if the recording is stopped before filling up the allocated memory, the remaining memory can not be used to record another sequence, as it has been already reserved.

There are a few options when closing a RAM sequence: **Discard sequence** (default), **Ask if the sequence has to be saved** and **Auto save using current file naming scheme**.

5.7 Playback Settings

When playing back a sequence, an important parameter is the playback speed. By default, TroublePix tries to play the sequence at the same speed as the one it was recorded at. You can, however, force a custom playback speed.

During playback, you can modify the speed using the **Playback Speed Slider**, as described in the [Controlling the Playback Speed](#) section. To automatically see the Playback Speed Slider when starting playback, select **Show speed slider when playback starts**. The speed can be altered up to 400% in either direction (forward or backward). If you do not select **Reset speed to default value when playback stops** the altered speed will be used the next time playback starts.

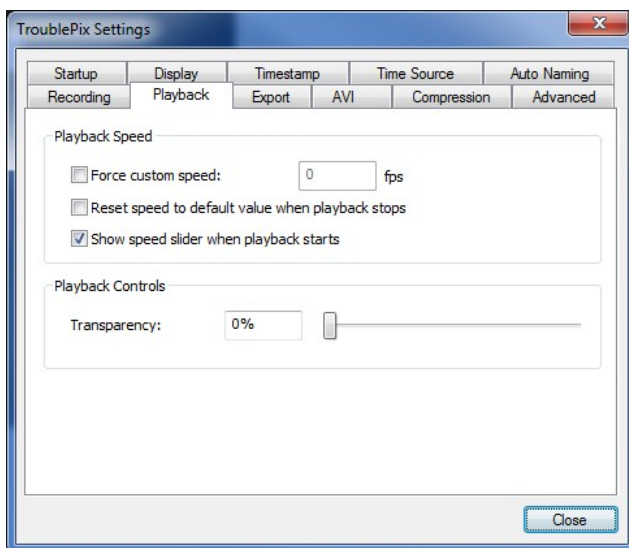

Because the playback controls are displayed as an image overlay, you can adjust their transparency by simply dragging the horizontal slider to an optimum value so that the image and the controls are visible. The transparency range is from 0% to 90%.




5.8 Export Settings

This tab lets you set the default options for exporting an image or snippet (see [Saving or Exporting a Sequence](#) for more details).


Exporting a snippet is equivalent to saving the current selection as a new sequence or as widely known formats such as Windows AVI or Apple QuickTime MOV.

Check the **Do not prompt for file name when exporting** check box to have TroublePix generating a file name automatically for all exported files.

If the whole source file is included in the current selection range, the output file name will have the same name as the source file. Otherwise, current selection range will be appended. Finally, if a file with that name already exists, an index will be appended to avoid overwriting.

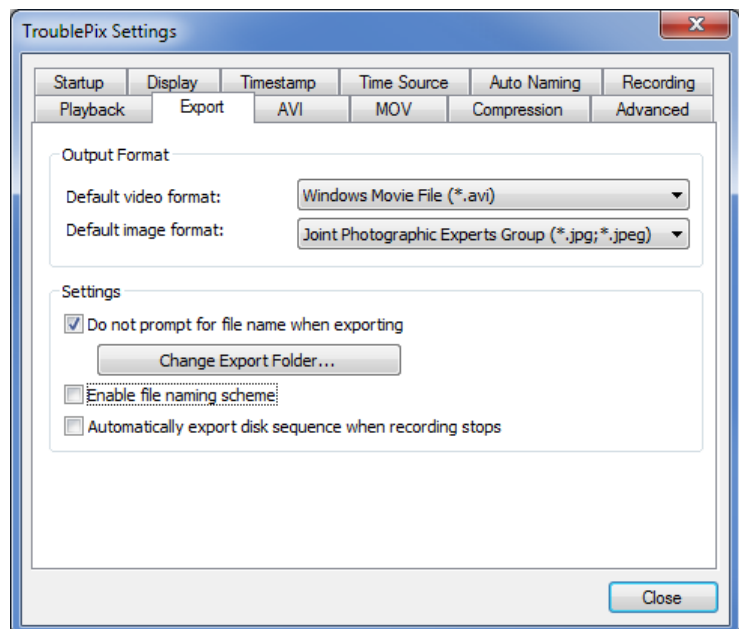

By default, all exports are stored in the same directory as the source files using the format specified in **Default video format** and **Default image format** fields respectively. To change the export location, click on the **Change Export Folder** button and select a preferred location.

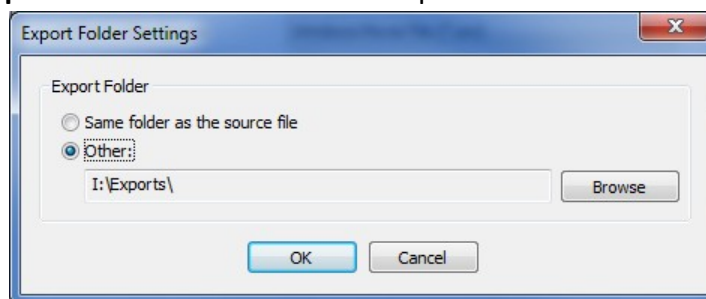


If **Enable file naming scheme** is checked, the current file naming scheme is used to generate file names when exporting to video or image files.

Optionally, TroublePix can be configured to automatically export sequences when recording stops. This setting is available only if recording to disk in .SEQ format.

5.9 AVI Settings

The **AVI Settings** page lets you configure the video codec used to encode the video input or set a custom frame rate. Some video codecs support configuring the encoding parameters via a property page. To access this page, if available, click on the **Settings** button.

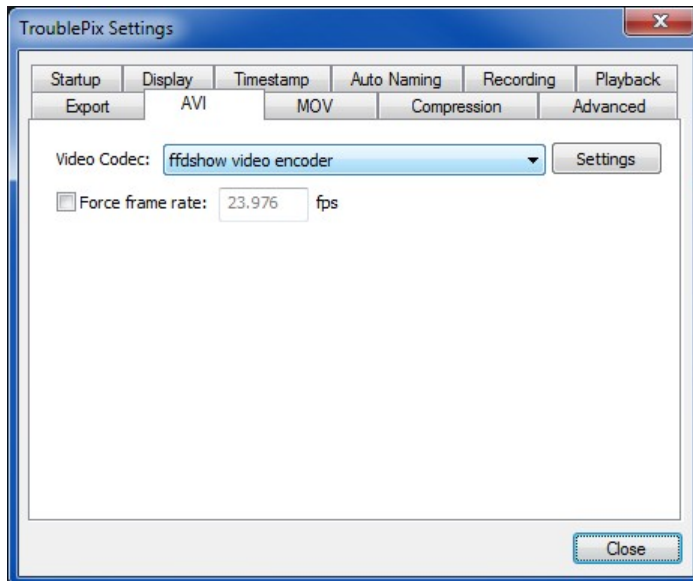


5.10 MOV Settings

Similar to **AVI Settings** page, this dialog allows to select and configure QuickTime video codec and quality compression. Optionally, a custom frame rate can be set. If not provided, the input source frame rate is used when creating the QuickTime movie.

This page is not available:


- on 32-bit version, if QuickTime 7.x or higher is not installed.
- on 64-bit version (due to lack of QuickTime SDK for Windows 64-bit platforms).

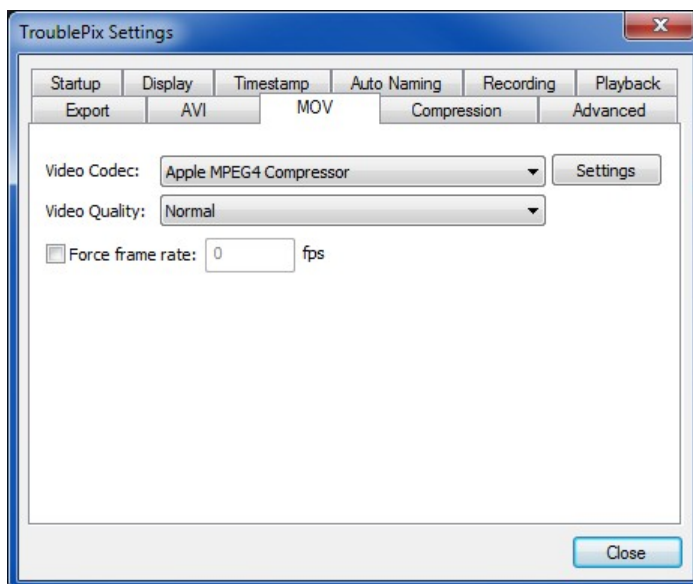

5.11 Compression Settings

This page lets you enable video compression when recording to **Sequence** file format (.seq) or saving a sequence snippet.

Multiple compression algorithms are available for various scenarios. For instance, Lossy JPEG is recommended when encoding live video unlike lossless algorithms that are most CPU demanding and recommended for offline compression only. To find more about lossy and lossless JPEG compression algorithms, please refer to the [Lossy vs. Lossless Compression](#) section.

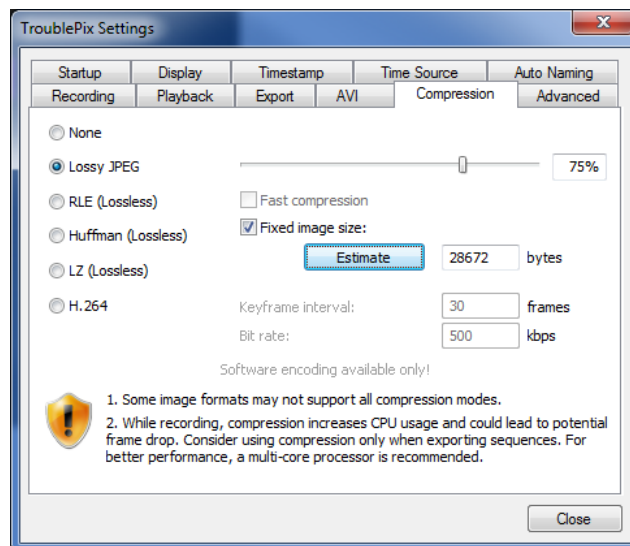

5.11.1 Lossy vs. Lossless Compression

In general, compression algorithms compress data (such as images) using one of two approaches: lossy or lossless. Lossy compression removes information that has little effect on overall quality, or that can be recovered by interpolation. This approach is generally used with sound and image formats. Lossless compression ensures that the original data can be fully reconstructed from the compressed version, with absolutely no loss of information. The lossless approach is used in situations where any loss of detail would be unacceptable.

When using lossless compression it is strongly recommended that you select the **Fast compression** feature, which uses a multi-core optimized compression algorithm. If using **Lossy JPEG** compression, a quality of **75%** or higher is considered visually lossless.

Real-time recording with compression is a very powerful feature in TroublePix. It is mostly useful when you want to record for longer periods, using less memory or disk space, while maintaining practically the same level of quality as uncompressed data. However, compression demands more computational power than recording uncompressed data, and therefore requires a stronger PC configuration. Our recommendation for minimum system requirements would be an Intel® Core™2 Duo Processor with 2 GB of RAM, for recording 640x480 monochrome sequences at 30 fps.

Real-time compression can be performed either to disk or RAM. When loop recording to disk, the **Fixed image size** parameter must be set because compressed images vary in size. This value determines the entire video buffer size, and it must be large enough to hold any compressed image in the loop. If it is too small for a given image, compression will fail and the result will be a black image.

To avoid that, simply point the camera to the scene you want to record and click on the **Estimate** button to have TroublePix estimating a fixed image size value.

Compressing a sequence is similar to saving it. The only difference is that you have to enable compression and set the appropriate parameters for compression. For more details, please refer to the section on [Saving or Exporting a Sequence](#).

5.11.2 Compression Performance

Compression performance varies according to the following parameters:

- Image size and resolution (color, monochrome, 8 bit, 16 bit...);
- Acquisition frame rate;
- Image texture and percentage of area unchanged;
- CPU performance;
- Compression algorithm.

JPEG Compression

The following table summarizes the performance of the JPEG compression algorithms that can be achieved with an Intel P4 processor clocked at 3.06 GHz:

Compression Type	640 x 480 mono 8-bit	640 x 480 RGB 24-bit
No Compression	120 fps	46 fps
Lossy JPEG	106 fps	62 fps
RLE (lossless JPEG)	112 fps	37 fps
HUFFMAN (lossless JPEG)	30 fps	8 fps
LZ (lossless JPEG)	8 fps	1 fps

Note: when using JPEG compression, the sequence must be recorded to a NTFS disk partition.

H.264 Compression

If Intel Sandy Bridge technology is detected hardware H.264 encoding is performed automatically. If not present, only software encoding is available. For more details about H.264 encoding performance, please visit <http://www.norpix.com/products/codecs/directshowcodec.php>.


Note: due to some H.264 encoding limitations, image width and height must be multiple of 16 and 8 respectively.

5.12 Advanced Settings

This page allows to backup, load, lock or unlock a configuration and reset settings to their default values. When backing up a configuration, all TroublePix and grabber settings are packed and stored to a .zip compressed file. You can easily switch from a configuration to another by loading different configuration files.

Locking a configuration will prevent any changes made to the current configuration, including camera/frame grabber and software settings. Locking/unlocking operations are password protected and should be used only by experienced users.

Note: external plugins are not affected by this rule.

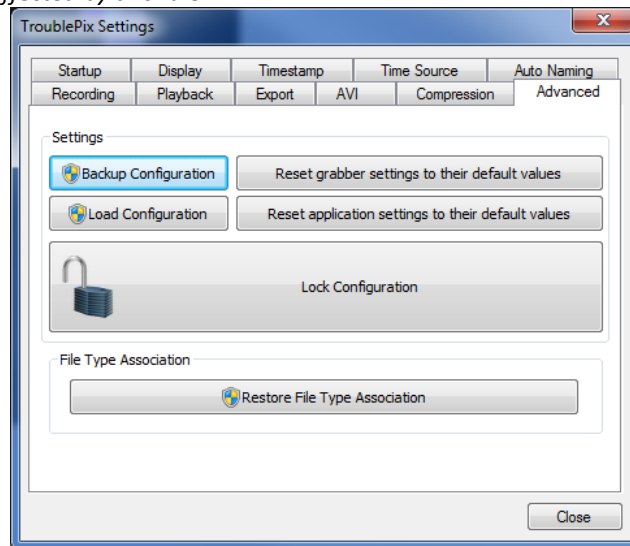

In case the password is lost, it can be reset by running TroublePix with the "-resetpassword" argument from a command window.



Resetting grabber settings will flush all changes made to the camera/frame grabber settings or adjustments. However, some cameras may store these changes until they are powered cycled.

Resetting TroublePix settings will restore all application settings to their default values.

To restore the sequence file type association (the .seq file extension) to TroublePix, click on the **Restore File Association** button.

6 Keyboard Shortcuts

Below is a complete list of keyboard shortcuts currently supported by TroublePix:

Keyboard shortcut	Description	Keyboard shortcut	Description
F1	Open TroublePix User Guide	Ctrl+T	Show Thumbnails
F2	Save/Export	Ctrl+B	Toggle Bayer conversion
F3	Start/Stop Playback	Ctrl+1	Switch to GBRG Bayer pattern
F4	Toggle Review mode	Ctrl+2	Switch to GRBG Bayer pattern
F5	Start/Stop Recording	Ctrl+3	Switch to BGGR Bayer pattern
F6	Switch to Camera Panel	Ctrl+4	Switch to RGGG Bayer pattern
F7	Switch to History Panel	Ctrl+P	Change Bayer pattern
F8	Switch to Status Panel	Ctrl+C	Toggle Auto Color Balance
Alt+M	Show Marker List	Ctrl+V	Show/Hide time stamp overlay
Alt+S	Show Status log	Ctrl+G	Load grabber
F9	Open TroublePix Settings	Ctrl+Shift+G	Reload current grabber
Ctrl+F9	Open TroublePix configuration file	Ctrl+Alt+G	Load preferred grabber
F10	Toggle "Fit Image To Window" mode	Ctrl+L	Toggle LIVE mode (grabber acquisition)
F11	Mark Current Frame (during recording only)	Ctrl+H	Adjust grabber features
Ctrl+F11	Mark/Unmark Current Frame (during playback only)	Ctrl+J	Adjust LIVE adjustable features
F12	Toggle Full Screen	Ctrl+D	Adjust advanced grabber settings
Space	Simulate Pre/Post Trigger	Ctrl+F	Change buffer count
Ctrl+Left Arrow	Go to previous marker	Ctrl+Y	Launch Batch Processor
Ctrl+Right Arrow	Go to next marker	Ctrl+E	Launch Sequence Header Editor
Ctrl+O	Open Sequence	Ctrl+R	Launch Register Manager
Ctrl+Shift+O	Open AVI	Ctrl+N	Launch NorPix Logger
Ctrl+X	Close current file	Ctrl+K	Launch benchmark tool
Ctrl+Shift+X	Close all opened files	Ctrl+U	Check for updates
Ctrl+S	Save As...	Ctrl+Shift+F	Send feedback to NorPix
Ctrl+I	Export current frame to image	Ctrl+Shift+L	Display license information
Ctrl+W	Export to Windows Movie (*.avi)	Ctrl+A	Display program information and version number
Ctrl+Q	Export to QuickTime Movie (*.mov)	Alt+1	Activate Camera View
Ctrl+Shift+P	Print current frame	Alt+2	Activate Playback View 1
Ctrl+Shift+V	Print preview	Alt+3	Activate Playback View 2
Ctrl+Shift+S	Open Printer Settings dialog	Alt+4	Activate Playback View 3
Alt+F4	Quit the application	Alt+5	Activate Playback View 4
+ or Ctrl+'+'	Zoom In	Alt+6	Activate Playback View 5
- or Ctrl+'-'	Zoom Out	Alt+7	Activate Playback View 6
* or Ctrl+'0'	Reset Zoom		

7 Plugin Modules

Plugin modules are typically external *.DLL files, designed to perform a specific task. TroublePix looks for external modules in the Plugins subfolder. If detected and loaded successfully, a plugin should be listed under the **Plugins** menu.

7.1 Audio Trigger

This plugin monitors an audio input line and notifies TroublePix when the audio level is higher than a certain value. A valid license code is required to run this plugin. To get one, please contact NorPix at sales@norpix.com.

To get started, select the capture audio device and sound format, set a threshold value and start monitoring the audio line. Adjust the threshold value while watching the audio level indicators.

Select an action to be executed by TroublePix when sound is detected.

Available actions are:

- **None (Testing Mode)**
- **Start Recording**
- **Stop Recording**
- **Pre/Post**
- **Mark Frame**
- **Set Reference Time**

The screenshot shows the 'Audio Input Level' and 'Triggering' configuration panels. The 'Audio Input Level' panel includes a 'Device' dropdown set to 'Microphone (Logitech USB Headse...)' with a 'Properties' button, a 'Format' dropdown set to '96 kHz, stereo, 16-bit', and two audio level meters for 'Left' and 'Right' channels, both showing 4% volume. A threshold slider is set to 90% between 0 and 100, with 'Start Monitoring' and 'Stop Monitoring' buttons below it. The 'Triggering' panel has an 'Action' dropdown set to 'None (Testing mode)', an 'Upon trigger' dropdown set to 'Rearm', a 'Delay' input field set to '1000' ms, and a red 'Armed' indicator bar at the bottom.

Optionally, a post trigger action can be executed upon sound detection either immediately or after some delay. Available post trigger actions are:

- **Do nothing (default)**
- **Rearm** - if selected, the trigger will rearm itself automatically.
- **Stop Monitoring** - stops monitoring audio input level (stops the audio capture).

Finally, click on the **Arm** button to arm the trigger. That will put the module in a “waiting” state, waiting for the audio input level to cross above the threshold value. When that occurs, an audio event is triggered and the selected action is executed followed by the post trigger action.


To achieve maximum accuracy, make sure you disable any software enhancements or sound effects on the selected audio input device.

7.2 Brightness, Contrast, Gamma

Designed as built-in feature, the **Brightness, Contrast, Gamma** plugin provides a simple and effective way to adjust the brightness, contrast and gamma parameters and therefore get low noise and high image quality even when recording in low-light conditions.

Although already included in the [Color Remapping](#) plugin, the **Brightness, Contrast, Gamma** plugin has become a stand-alone feature due to its great usability and in response to user feedback.

Therefore, to learn how to work with this plugin, please check the [Color Remapping Using Non-linear ASC CDL Formula](#) section.

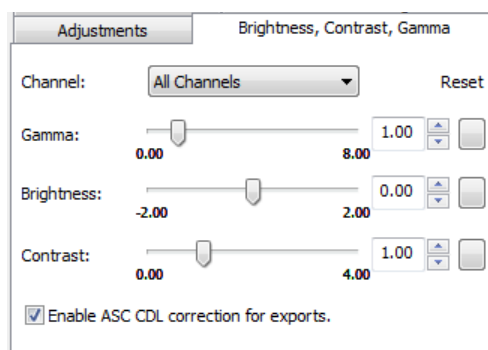

7.3 Color Remapping

Color remapping is a very powerful tool. There are multiple possible usages for this tool, such as:


- remapping specific pixel values to some other values. This can be applied, for instance, as a recalling tool for all captured pixel intensities;
- mapping 10, 12, 14 or 16 bit pixels to a more comprehensive set of intensities;
- generating pseudo color for monochrome images, where specific intensity can be highlighted with separate false color.

The color remapping is performed real time, via anamorphosis. Look up tables are used to define the remapping level. Independent red, green and blue levels can be specified, via predefined LUT files, or predefined formulas.

The module can be applied on almost all TroublePix supported image formats. Furthermore, it can be used with 8, 10, 12, 14 and 16 bit pixels, color or monochrome.

To enable color remapping, select one or more of the four available operating modes:

- Using predefined look up tables (LUT)
- Using a user-defined LUT file
- Linear Window Leveling (image shifting)
- Using the [ASC CDL formula](#)

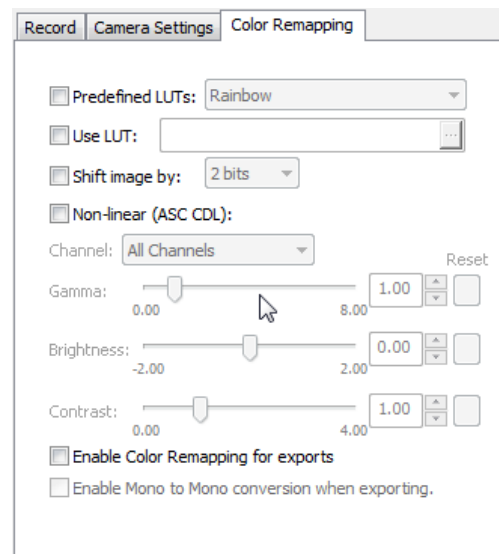

7.3.1 Color Remapping Using Predefined Look Up Tables

This can be used for remapping monochrome images to pseudo color. Currently, five predefined look up tables are available:

- Rainbow
- Inverted rainbow
- Hot
- Cold
- Negative

Pseudo color cannot be used with true color RGB or YUV images.

7.3.2 Color Remapping Using a LUT File

A comma separated text file (also known as .csv file format) can be used to define a LUT table. This type of file can be generated with any basic text editor.

The syntax is very simple. Each line contains 4 entries: the level value to be remapped, followed by the blue, green and red values. The following rules apply:

- There is no need to specify all the LUT values and entries. Only the needed value must be specified. All missing values will be interpreted as “Leave as is”.
- Level can be specified as range using [-] character.
- Use the '#' character to comment a line.
- Out bound values are ignored.

Example:

```
#Index, Blue, Green, Red Remapping value
0, 255, 0, 0 = gray level 0 will be remapped as pure blue
1, 10, 10, = gray level 1 will be remapped as: blue=10, green=10, red=unchanged
[200,255], 255, 255, 255 = gray levels 200 to 255 will be remapped as pure white
```


7.3.3 Color Remapping Using Linear Window Leveling

Linear window leveling can be performed for pixel depth greater than 8 bits. By default, TroublePix displays the 8 most significant bits of captured images. Window leveling can highlight specific bit ranges of the captured images.

As an example, a 10 bit image can be leveled in 3 ways:

- 8 most significant bits (bit 2 to 10 = default TroublePix setting)
- 8 middle significant bits (bit 1 to 9)
- 8 least significant bits (bit 0 to 7)

7.3.4 Color Remapping Using Non-linear ASC CDL Formula

The American Society of Cinematographers Color Decision List (ASC CDL) has defined a format for the exchange of basic primary color grading information. A three parameters formula can be used to define most possible remapping and color correction:


$$\text{out} = (i * s + o)^p$$

where:

- **out** is the color graded pixel code value
- **i** is the input pixel code value (0=black, 1=white)
- **s** is slope (any number 0 or greater, nominal value is 1.0)
- **o** is offset (any number, nominal value is 0)
- **p** is power (any number greater than 0, nominal value is 1.0)

The formula is applied to the three color values for each pixel using the corresponding slope (contrast), offset (brightness), and power (gamma) for each color channel.

The **Channel** pull down menu allows to select which color channel should be controlled. Select **All Channels** to apply the same formula for all 3 channels, or select an individual color plan you want to work with.

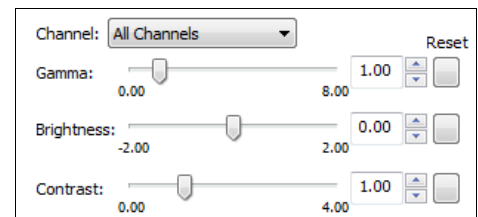


The **Reset** button allows to reset all parameters to their default values: Gamma=1, Brightness=0, Contrast=1.

7.4 Motion Detector

The **Motion Detector** plugin module is designed to perform a real-time image processing of a continuous video stream and generate a TroublePix event upon detecting a significant motion or change within the camera's field of view. The analysis can be performed on the whole image area or a region of interest (ROI). After it detects motion, an event is sent to TroublePix. As effect, one of the actions below is triggered:

- **Start Recording;**
- **Stop Recording;**
- **Pre/Post;**
- **Mark Frame;**
- **Save Frame.**

Note: more actions could be added at the user's request.

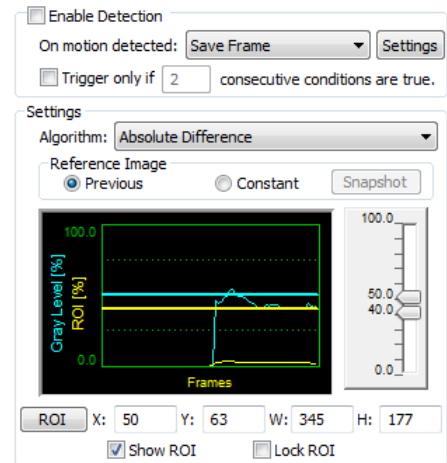

To load/unload **Motion Detector** in TroublePix, select/unselect it from the **Plugins** menu. A valid license code is required to run this module. To get one, please contact NorPix at sales@norpix.com.


7.4.1 Motion Detection Algorithms

The main concept behind motion detection in images is relatively simple. A reference is taken at the very start of the program. This reference is used as the base to determine if any motion has occurred. The camera will then consistently take pictures, and TroublePix compares them against the reference. If there is any difference between the two, then something has moved in the scene that the camera is viewing. Motion detection algorithms will also use a threshold value which is the amount that an image must differ against the reference in order to be considered as motion detection. Threshold values allow you to fine tune a particular motion detection algorithm for most needs.

Two image processing algorithms are available, depending of the nature of the scene or image to be monitored: **Mean Gray** and **Absolute Difference**, described below.

7.4.2 Mean Gray Algorithm

Calculates the average gray level in the defined ROI of the image. The **Gray Level** represents the brightness of a pixel. The value associated with a pixel representing its lightness from black to white. Typically, for a 8-bit monochrome image, it's defined as a value from 0 to 255, with 0 being black and 255 being white. As a conclusion, this algorithm detects light changes in an image sequence. The Mean Gray algorithm supports color images as well as monochrome.

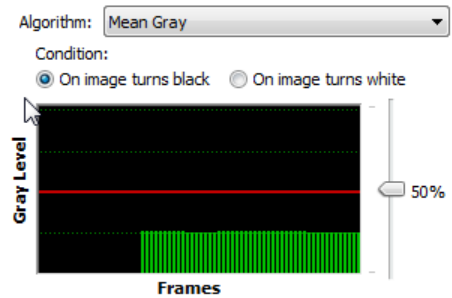


7.4.3 Absolute Difference Algorithm

Calculates absolute difference between two image ROIs. Basically, this algorithm is based on comparing the current video frame with previous one or with a static reference image called **Background Image**.

This algorithm can be accurately fine tuned since two parameters are adjustable:

- **ROI [%]** defining how many pixels, reported to the total ROI, need to change, compared to the reference, to assert an event;
- **Gray Level [%]** defining how much the pixel intensity must change in order to be perceived as motion.

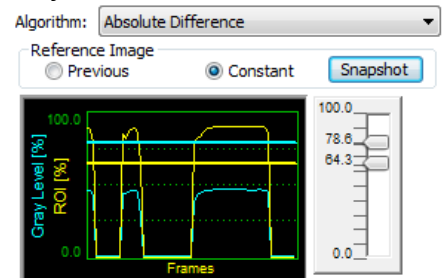

So technically, both conditions must be true in order to trigger an event. For using only one condition, make sure you set the other to zero.

7.4.4 Configuring Motion Detector


Following parameters have to be configured:

- **Action** – represents the event to trigger in case of motion detected;
- **Algorithm** – the motion detection algorithm;
- **ROI** – the monitored region of interest inside the image;


7.4.5 Configuring the Action

When motion is detected one of the following action can be triggered:

- **Do Nothing (Testing mode)** - for testing and system calibration purposes only.
- **Start Recording** - starts a recording, if TroublePix is ready to record.
- **Stop Recording** - stops the current recording;
- **Pre/Post** - sends a Pre/Post event to TroublePix. If the Pre/Post module in TroublePix is not active, the event will be ignored. For more details about Pre/Post Module, please refer to TroublePix documentation.
- **Mark Frame** - marks the current frame of the video sequence, letting the user easily identifies when a change or motion took place. For more information about **Event Markers**, please refer to the [Marking Frames](#) section.
- **Save Frame** - saves the frame on which motion has been detected. The destination folder and output image format can be selected from the Settings dialog:

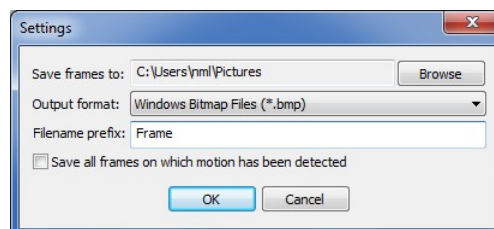

It's also possible to enable alarm triggering only after the condition has been detected consecutively for a specified number of times.

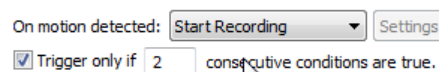


7.4.6 Configuring the Motion Detection Algorithm

Choose among the available algorithms, according to what you think will be best suitable for your needs. The algorithms are described in more detail below.

7.4.7 Configuring the Mean Gray Algorithm

The **Mean Gray Algorithm** detects light changes by calculating a gray level average value for each image processed and comparing it with a certain threshold value. A lower gray level indicates that the image is getting darker. The algorithm can be configured to trigger the selected action either if the image becomes lighter or darker.


The threshold value is expressed in percentage to match all image formats and bit depths. It can be adjusted by dragging the vertical slider to the desired position.

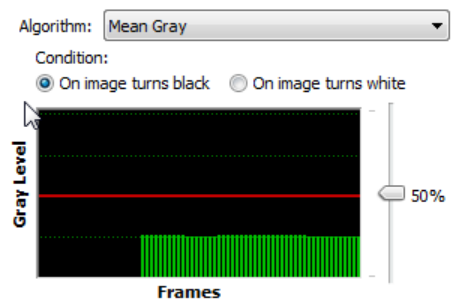

7.4.8 Configuring the Absolute Difference Algorithm

The **Absolute Difference Algorithm** detects motion by computing the difference between two images received from the currently selected camera/frame grabber. If the difference between the compared images crosses a certain threshold value then motion is detected and the selected action is triggered.

In some cases, motion detection may not be 100% accurate. It may tend to ignore genuine motion at times or report motion when there is none, leading to false alarms. As threshold decreases, the algorithm will detect the slightest motion, and as threshold increases, it will detect only pronounced motion and ignore slight movements. You may therefore think that lower the threshold, the better it is. However, this is not the case. As threshold decreases, the chances of false alarms increase. To improve motion detection accuracy, it is important to select an optimum (as low as possible) threshold value while keeping the chances of false alarms to minimum.

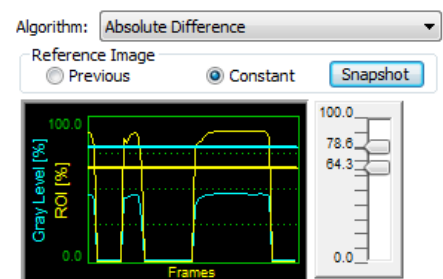

There are three parameters that need to be adjusted:

- **Reference Image** – can be either the previous image or a static image. At the very beginning, if no reference image is defined, the first incoming image will be assigned as background image. If you would like to change the background image, click on **Snapshot** button to capture a new image and set it as the new background for the next processing. A copy of the newly background is saved on disk for the next time you load **Motion Detector**.
- **Gray Level** – drawn in cyan color. To set this parameter, drag the corresponding slider.
- **ROI** – drawn in yellow color. To set this parameter, drag the corresponding slider.

7.4.9 Configuring a Region of Interest (ROI)

When loading the **Motion Detector** for the first time no ROI is defined. To define a ROI, first make sure that you have started the acquisition and selected the **Camera View**. Then press on the **ROI** button and use the 'click & drag' technique to define a ROI inside the image area.


Alternatively, you have the option to manually define/change the ROI, by simply editing **X, Y, W** and **H** values, where X and Y represent the origin point, and W (width) and H (height) the size of the ROI. The changes are applied as soon as the edit controls lose the focus or you hit the Enter key.

ROI	X: 190	Y: 148	W: 320	H: 240
	<input checked="" type="checkbox"/> Show ROI	<input type="checkbox"/> Lock ROI		

Two options are available: show/hide or lock the ROI. When locked, the ROI cannot be changed.

The red rectangle, displayed as image overlay, represents the actual region of interest being processed by the **Motion Detector**.

Once a ROI has been defined, you may want to adjust it to perfectly match your needs. To adjust the ROI, select the red rectangle and drag either one of the 9 red squares or the entire rectangle in the desired direction.

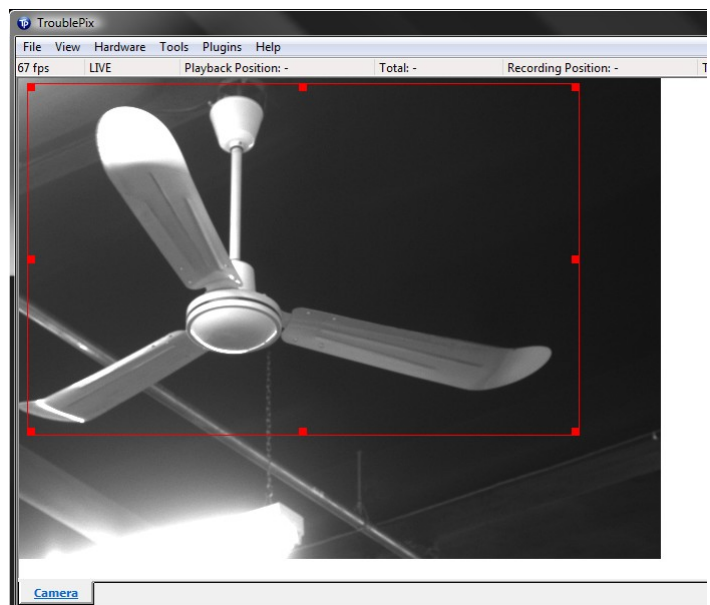

7.4.10 Testing the current configuration

Once you have configured the motion detection parameters, it is recommended that you test these settings. The best method to test these settings is to select the testing action from **Action** list and start monitoring. Slightly tune up the parameters to reach optimum values. Motion will be detected as soon as the condition is reached.

7.5 Line Overlay

The Line Overlay plugin provides basic functionality to draw a line or more on a TroublePix view. To add a line on the current view, simply click on the **Add Line** button and use the mouse to draw the line on the view area. Multiple lines can be added to each view. Line style, color and thickness are configurable.


Optionally, you can show/hide or lock the overlay layer. Locking the overlay will prevent further changes to any line object.

Use calibration if you want to align the camera field of view horizontally, vertically or by both axes.

The screenshot shows the 'Overlay' configuration panel. At the top is a button labeled 'Add Line'. Below it is the 'Line Attributes' section, which includes a 'Style' dropdown menu, a 'Color' dropdown menu currently set to 'Automatic' with a green color swatch, and a 'Thickness' dropdown menu set to '5'. There are two checkboxes: 'Show Overlay (show/hide line overlays)' which is checked, and 'Lock Overlay (prevent further changes)' which is unchecked. Below this is the 'Calibration' section, which is also checked. It includes a 'Mode' dropdown menu set to 'Vertical', a 'Color' dropdown menu with a cyan color swatch, and a 'Thickness' dropdown menu set to '3'.

7.6 MCC Pulse Generator

The **MCC Pulse Generator** plugin module is available from the **Plugins** menu. A valid license code is required to run this module. To get one, please contact NorPix at sales@norpix.com.

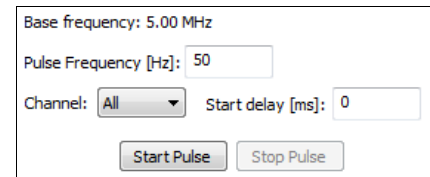

The screenshot shows a control panel for the MCC Pulse Generator. It includes a label 'Base frequency: 5.00 MHz'. Below it is a text input field for 'Pulse Frequency [Hz]' with the value '50'. To the left is a dropdown menu for 'Channel' set to 'All', and to the right is a text input field for 'Start delay [ms]' with the value '0'. At the bottom are two buttons: 'Start Pulse' and 'Stop Pulse'.

To get started simply enter the pulse frequency to be generated.

Since the pulse train triggers the camera, the pulse frequency will determine the exact camera frame rate.


The MCC board can be programmed to generate one single pulse train if selecting a single channel, or multiple synchronized pulse trains if using all channels (counters).

Optionally, the MCC board can be programmed to start the pulse(s) with a certain delay (in milliseconds).

Click on the **Start Pulse** button to program the MCC counter device to start generating a continuous pulse. To stop the pulse, simply hit the **Stop Pulse** button.

7.7 NI Pulse Generator (Traditional NI-DAQ)

Similar to the [MCC Pulse Generator](#) plugin, the **NI Pulse Generator** module is used to program a National Instruments board to generate continuous pulses with a user-defined frequency. The pulse train triggers the camera and so, it controls the camera frame rate. A valid license code is required to run this plugin. To get one, please contact NorPix at sales@norpix.com.

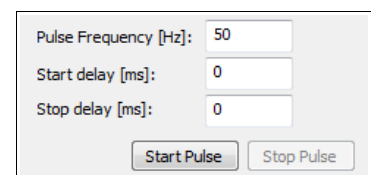

The screenshot shows a control panel for the NI Pulse Generator. It includes three text input fields: 'Pulse Frequency [Hz]' with the value '50', 'Start delay [ms]' with the value '0', and 'Stop delay [ms]' with the value '0'. At the bottom are two buttons: 'Start Pulse' and 'Stop Pulse'.

Simply enter the pulse frequency and click on the **Start Pulse** to program the NI board to generate a continuous pulse train. Stop the pulse by clicking on the **Stop Pulse** button.

Note: Latest Traditional NI-DAQ (Legacy) drivers must be installed on your computer to be able to use this plugin.

7.8 Camera-specific Plugins


These plugins are designed to control certain types of cameras using either serial communication or low-level functions exposed by the camera API. Mainly, they allow adjusting certain camera parameters that are not available via the **Camera Settings** and **Adjustments** pages. Future versions of TroublePix might include support for more cameras.

Please note that these tabs are not loaded by default. To enable them, check the **Plugins** menu.


7.8.1 IDT M3 Camera Control

This module allows to control and adjust some of the most important **IDT M3** camera features by sending specific commands to the camera using the **MVX SDK**, the camera API. Therefore, before loading the module, the communication with the camera must be set up properly and tested in the **MVX Control** application. For this module, the frame grabber that connects to the **IDT M3** camera must disable the serial communication in the [Camera Settings](#) tab. Otherwise, the module will not be able to connect to the communication port.

The **Image** page of the interface lets you adjust the **ROI (on X only)**, **Sync In**, **Gain**, **Exposure Time**, **Frame Rate**. Setting the **ROI** defines a new range for available frame rates. Changing the **Frame Rate** sets a new range for available shutter times.

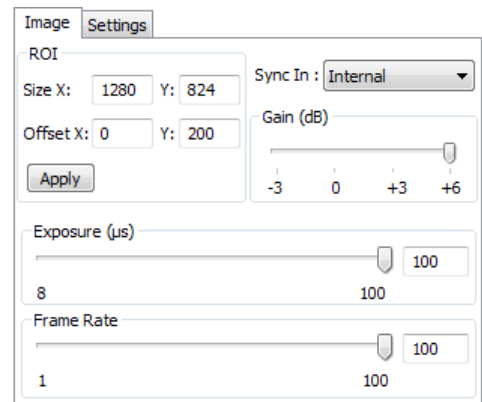

The **Settings** page allows you to open the camera you want to use. The available cameras are displayed in the list only after choosing the proper **Baud Rate**. Then, simply select the camera and press **Open camera**.

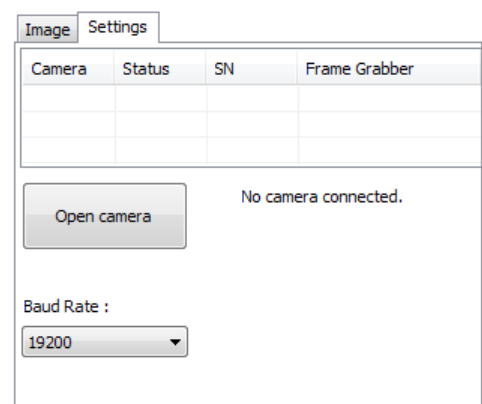


7.8.2 ImperX Camera Control

This module lets you adjust some of the most important **ImperX** camera features by sending specific commands to the camera via serial communication. Therefore, before loading the module, the serial communication must be enabled from the **Camera Settings** tab. Otherwise, the controls are disabled.

Supported camera features are: **Shutter Time** (also known as exposure time), **Gain** and **Frame Rate**.

Other features can be configured via the **Serial Communication** tab by sending camera-specific commands to the camera. Check the camera manual to find out more about the communication protocol and supported commands.

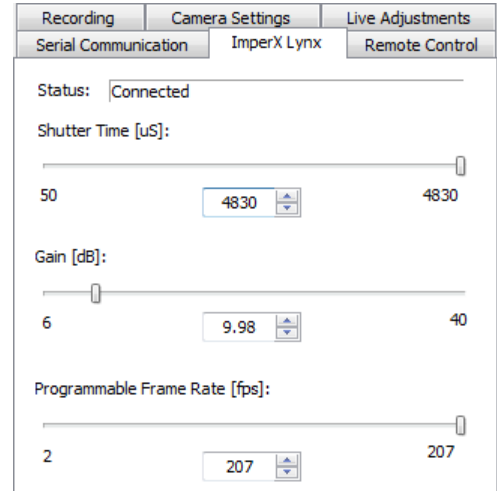


7.8.3 Mikrotron Camera Control

This module lets you adjust some of the most important **Mikrotron** camera features by sending specific commands to the camera via serial communication. Therefore, before loading the module, the frame grabber that connects to the **Mikrotron** camera must be loaded and the serial communication must be enabled from the **Camera Settings** tab. Otherwise, the controls are disabled.

Supported parameters are: **ROI**, **Frame Rate**, **Shutter Time**, **Digital Gain**, **Black Level**. Setting the **ROI** defines a new range for available frame rates. Changing the **Frame Rate** sets a new range for available shutter times.

Other settings are: **Shutter Mode** (Free Run, PWC or Timer), **Shutter Polarity** (Positive or Negative Edge), **Mirror Mode** (OFF, X Only, Y Only, X and Y) and **FPN correction** (enabled or disabled).

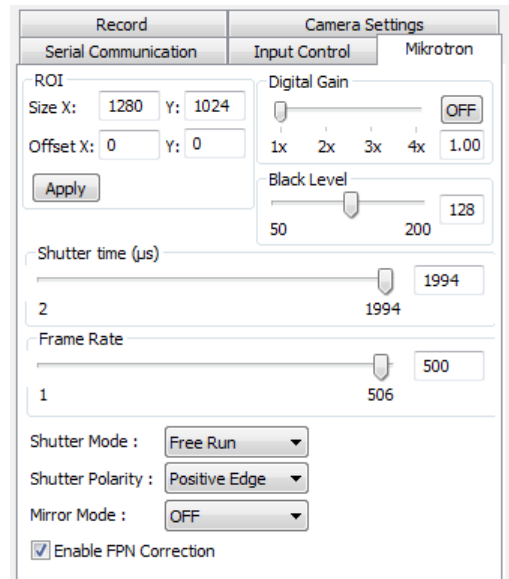

Other camera features can be configured via the [Serial Communication](#) tab by sending camera-specific commands to the camera. Check the camera manual to find out more about the communication protocol and supported commands.

7.8.4 Optronis Camera Control

This module lets you adjust some of the most important **Optronis** camera features by sending specific commands to the camera via serial communication. Therefore, before loading the module, the frame grabber that connects to the **Optronis** camera must be loaded and the serial communication must be enabled from the [Camera Settings](#) tab. Otherwise, the controls are disabled.

Supported parameters are: **ROI**, **Frame Rate**, **Shutter Time**, **Sensitivity (Gain)**, **Black Level**. Setting the **ROI** defines a new range for available frame rates. Changing the **Frame Rate** sets a new range for available shutter times.


Other settings are: **External Sync** (OFF, ON), **Sync Source** (Cable, Grabber), **Sync Polarity** (Low, High), **Sync Mode** (Edge, Level), **Mirror Mode** (OFF, X Only, Y Only, X and Y) and **FPN correction** (enabled or disabled).

Other camera features can be configured via the [Serial Communication](#) tab by sending camera-specific commands to the camera. Check the camera manual to find out more about the communication protocol and supported commands.


Record		Camera Settings	
Serial Communication		Input Control	Optronis
ROI		Sensitivity: 2.25	
Size X: 1280	Y: 1024	Black Level: 211	
Offset X: 0	Y: 0	0 255	
<input type="button" value="Apply"/>			
Shutter time (µs)		2630	
1 3000			
Frame Rate		100	
20 100			
External Sync: OFF	Sync Polarity: High		
Sync Source: Grabber	Sync Mode: Edge		
Mirror Mode: OFF			
<input checked="" type="checkbox"/> Enable FPN Correction			

7.8.5 Photon Focus Camera Control


This module lets you adjust the **Photon Focus** camera features via serial communication, using the **PFRemote API**. Therefore, before loading the module, the communication with the camera must be set up properly and tested in the **PFRemote** application. For this module, the frame grabber that connects to the **Photon Focus** camera must disable the serial communication in the **Camera Settings** tab. Otherwise, the module will not be able to connect to the communication port.

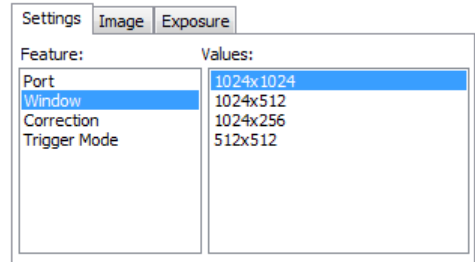

After a valid communication port has been selected in the **Settings** page, the module connects to the camera and new pages will become available: **Image**, **Exposure** and **Adjustments**. These depend on the features supported by the camera model. If a feature is not visible or not accessible, it means that it's not supported.

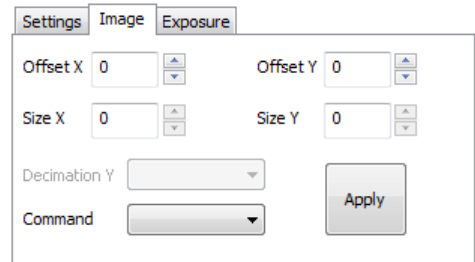

The adjustable features might include **ROI**, **Shutter Time**, **Frame Time**, **Trigger Mode**, **Correction**, **Simultaneous Readout**.

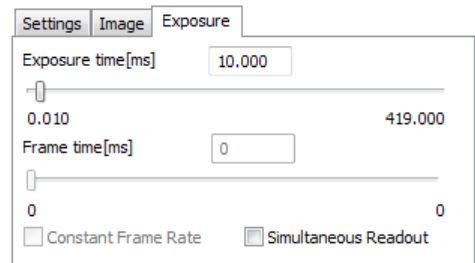


8 TroublePix Tools

8.1 Batch Processor

Batch Processor is a 32-bit wizard-like application designed to add more features to TroublePix, allowing the user to:


- Convert sequence file to standard or compressed AVI files.
- Extract individual frames from sequence files to a series of individual image files of various standards: TIFF, JPEG, BMP, PNG, JPEG2000, etc.
- Perform image processing like:
 - Bayer conversion;
 - Brightness, contrast or color correction;
 - LUT processor;
- Process sequence files in batches.
- Extract, split, reduce and expand sequence files.

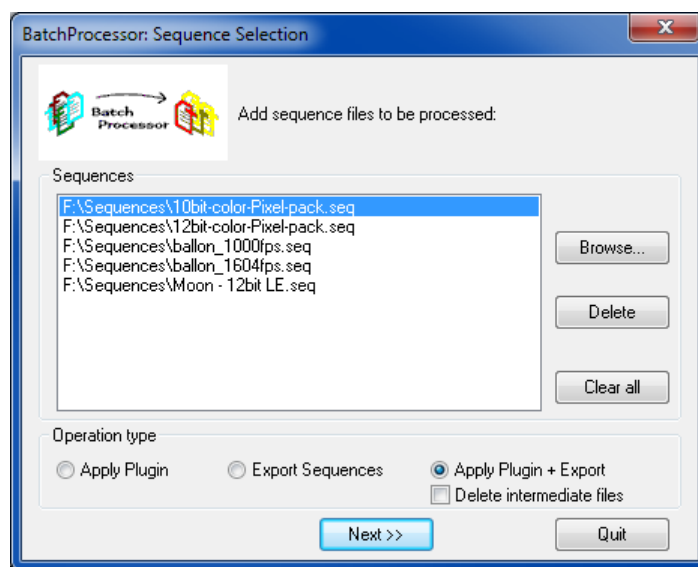

8.2 Sequence Header Editor

Sequence Header Editor is a 32-bit application, specially designed to allow the user to view or edit the information stored in a sequence header. Because the header contains important information about the sequence (image size and format, frame rate etc.), it is strongly recommended to use this utility very carefully. Any wrong information stored in sequence header could lead to unexpected errors.

On some rare occasions, when the sequence header was not saved properly (i.e. computer crashed while recording), advanced users can edit the faulty header, using a similar sequence as a reference.

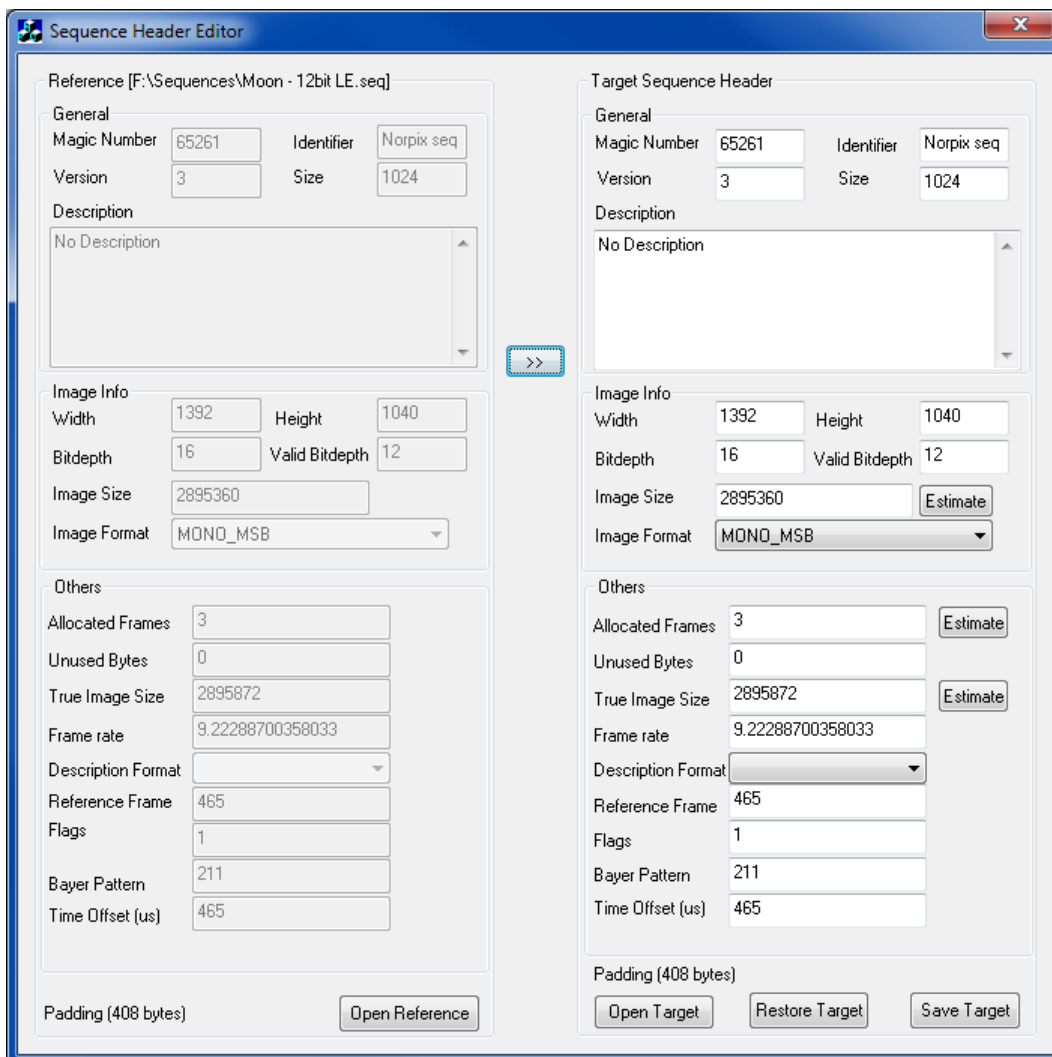

8.3 Register Manager

To be able to use your camera/frame grabber within TroublePix, the associated NorPix driver (Npx*.dll) must be registered on your system. If the driver is not registered, the camera/frame grabber will not appear in the hardware list when opening the [Load Grabber](#) dialog. If this is the case, the link below might help you troubleshoot the problem:


<http://www.norpix.com/support/faq.php#missingdll>.

This is probably the case when either your camera/frame grabber drivers are not properly installed on the computer or you installed an incompatible version. To check for the driver compatibility list, please visit: <http://www.norpix.com/support/drivers.php>.

If you successfully installed your camera/frame grabber drivers and still not able to select the device from the hardware list, you probably installed TroublePix before installing the camera/frame grabber software. To fix this, there is no need to re-install TroublePix. You can use **Register Manager** utility to register the NorPix driver. For easy identification, NorPix drivers are always preceded by **Npx** prefix.

Using the **Register Manager** application, the registration is easy and involves a few steps:

1. Locate NorPix drivers. Usually they are installed to **C:\Program Files\Common Files\NorPix**, but the path might be different on some systems. If the path is not automatically detected, click **Browse** to locate it.
2. Click **Search** to search for all modules available for registration.
3. Select NorPix driver compatible with your camera/frame grabber. If you don't know which driver to chose, click on **Check All**.
4. Click **Register** to perform the registration. After a short delay, a confirmation message will follow.
5. Click **Exit** to quit the application.
6. Start TroublePix and load the camera/frame grabber.

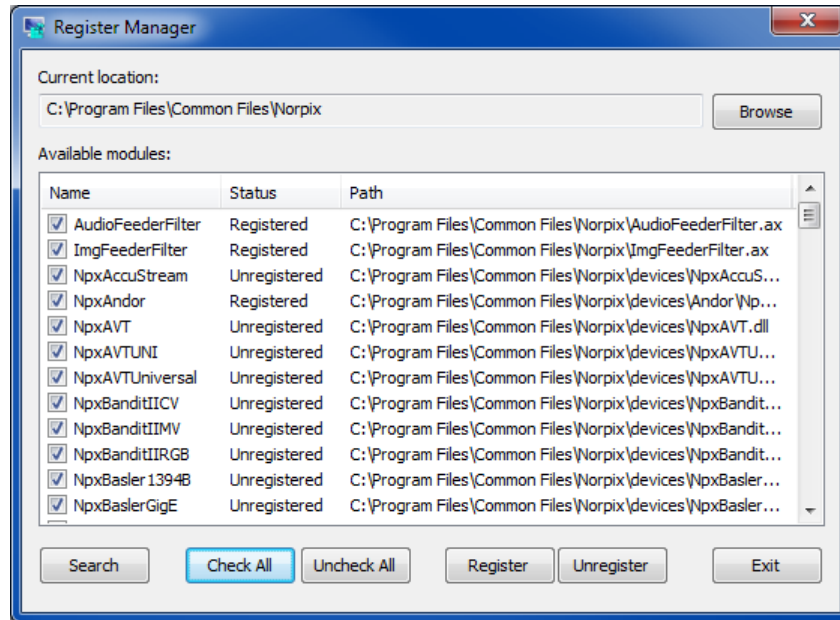


Note: **Register Manager** 32-bit or 64-bit version is installed, depending on what version of **TroublePix** you are using. In case you are using both, do not attempt to use **Register Manager** 32-bit with **TroublePix** 64-bit or vice versa.

8.4 NorPix Logger

Developed as a 32-bit stand-alone application, **NorPix Logger** was designed to log and display debug information about a program's execution.


Often, the recorded information could help the user solve an eventual problem by himself, without asking for professional assistance.

The user can clear, save or temporarily suspend the log.

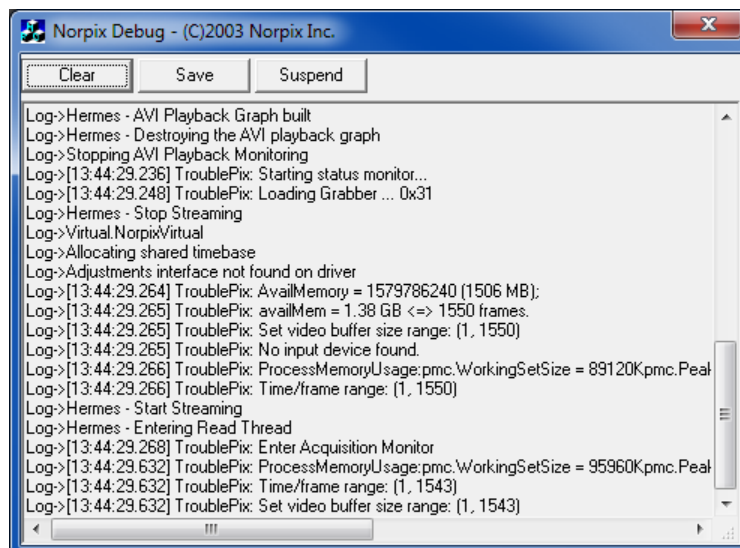

8.5 Disk/Memory Benchmark

DiskBench utility allows you to benchmark either your disk volumes or computer's internal memory to obtain the fastest possible recording and playback speeds under various image size and conditions.

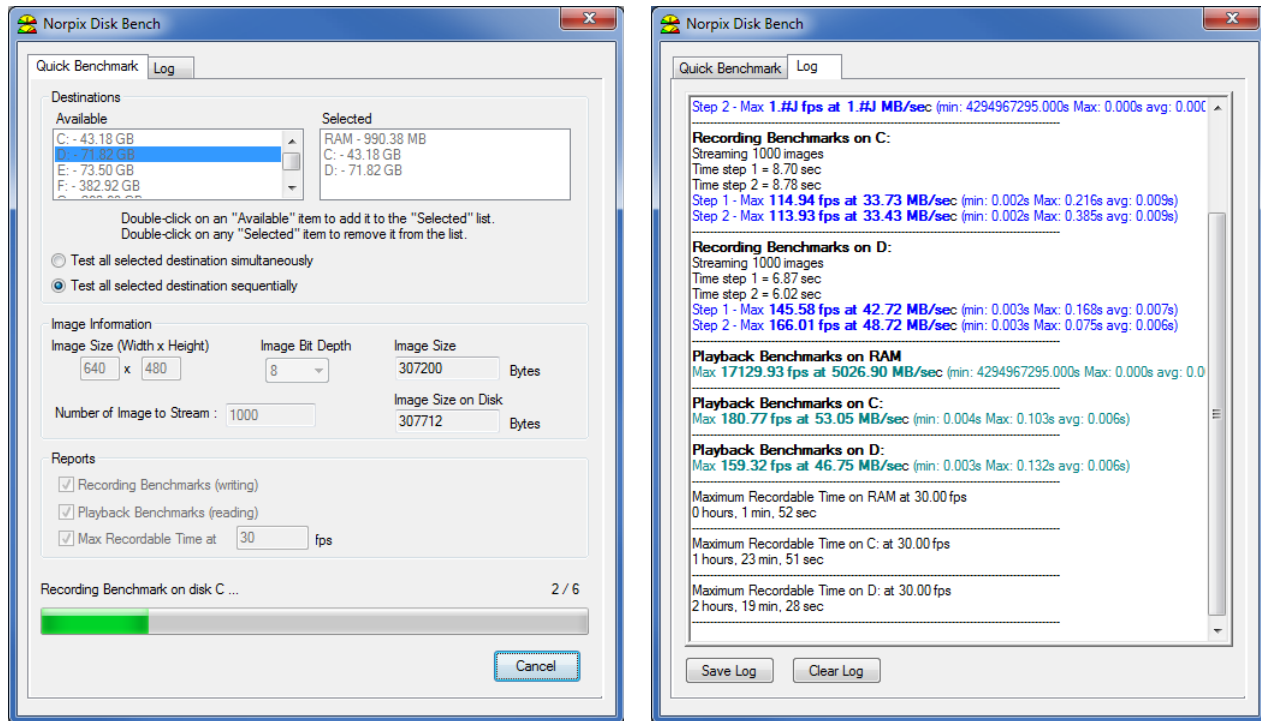

The result of the benchmark test is essential when trying to record/playback at high speeds and/or very high resolutions. Using this utility you will be able to find out the maximum read/write data bandwidth your computer can achieve.

If the system is not able to write faster than the camera is outputting data, mostly the software will drop frames. In such case, please contact [NorPix](http://www.norpix.com) for a system configuration that would be adequate to your recording/playback requirements.